


Bruksanvisning
GM - 6142CE



**INSTRUCTION & MAINTENANCE
MANUAL**

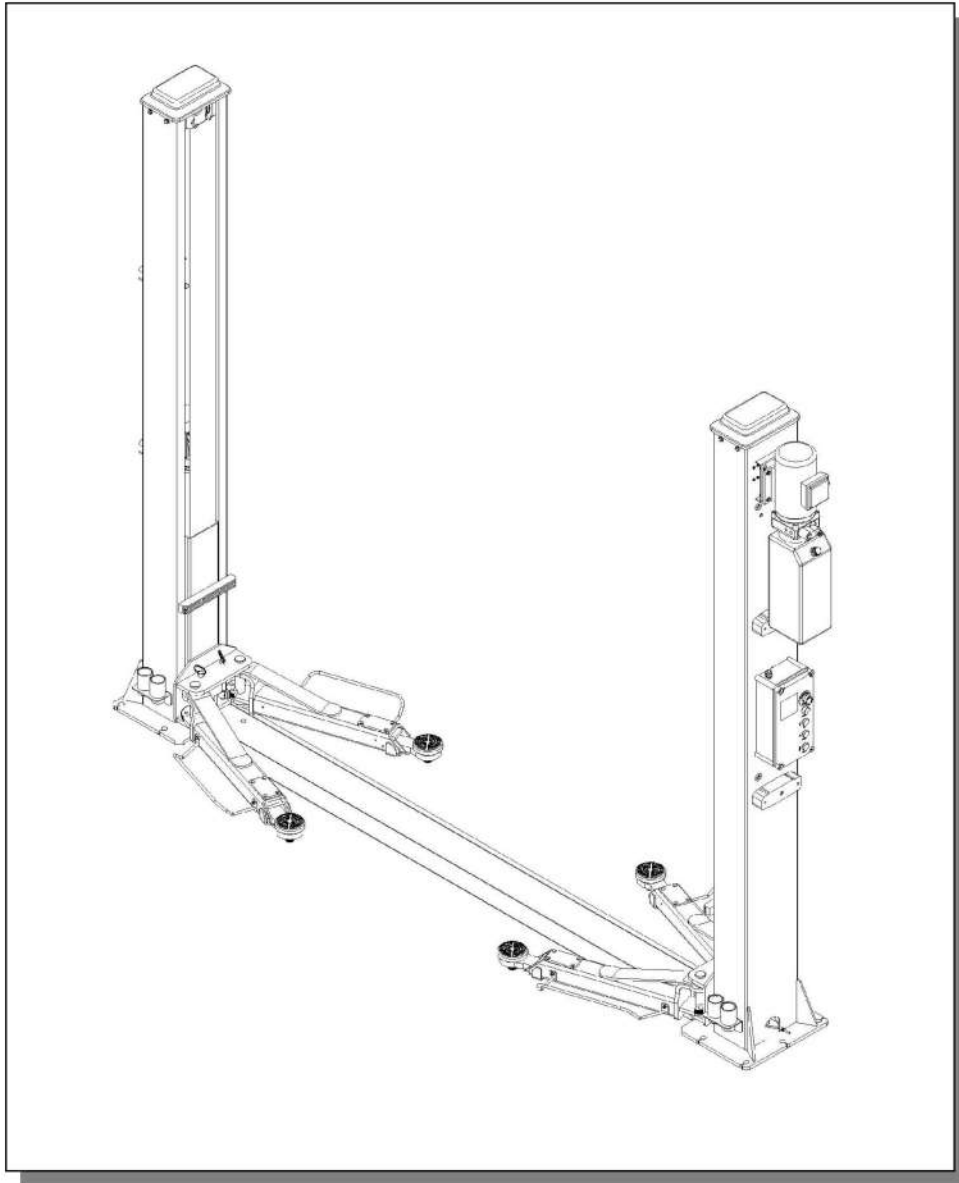

Read this entire manual carefully and completely before installation or operation of the lift

TWO POST LIFT INSTRUCTION MANUAL

Index	Page
1. Packing, transport and storage	- 2 -
1.1 Packing	- 3 -
1.2 Transport	- 3 -
1.3 Storage	- 3 -
2. Manual introduction.....	- 4 -
3. Description of the machine	- 4 -
3.1 Machine Application	- 4 -
3.2 Structure Features	- 4 -
3.3 Equipment	- 5 -
3.4 Frame	- 5 -
3.5 Control box	- 5 -
4. Specifications.....	- 5 -
4.1 Main technical parameter	- 6 -
4.2 External dimension drawing	- 7 -
4.3 Lifting arm dimension drawing	- 7 -
4.4 Suitable for types of vehicles (For reference only)	- 8 -
5. Safety notes	- 9 -
5.1 General precautions	- 9 -
5.2 protection devices	- 9 -
6. Machine structure and drive principle	- 11 -
6.1 machine structure:	- 11 -
6.2 Drive principle:	- 11 -
7. Installation	- 12 -
7.1 Installation requirement	- 12 -
7.2 Base requirement	- 12 -
7.3 Installation	- 14 -
7.4 Electrical Circuit Connection:	- 20 -
8. Commissioning	- 21 -
8.1 Fill hydraulic oil	- 21 -
8.2 Commissioning	- 21 -
9. Operation.....	- 22 -
9.1 Pre-commissioning:	- 22 -
9.2 Operating process:	- 22 -
9.3 Electrical operation instructions:	- 23 -
10. Maintenance and care.....	- 24 -
11. Trouble shooting table	- 24 -
12. Circuit diagram.....	- 26 -

1. Packing, transport and storage



All packing, lifting, handling, transport and unpacking operations are to be performed exclusively by expert personnel.

1.1 Packing

Standard configuration	1 # carton
Power unit and accessories	1pcs

Standard configuration	2 # carton
Main and sub column	1set
Oil hose cover plate	1pcs
Lifting arm	4pcs
Control box	1pcs
Accessory	1pcs

Table 1

1.2 Transport



Packing can be lifted or moved by lift trucks, cranes or bridge cranes. In case of slinging, a second person must always take care of the load, in order to avoid dangerous oscillations.

During loading and unloading operation, goods must be handled by vehicles or ships.

At the arrival of the goods, verify that all items specified in the delivery notes are included. In case of missing parts possible defects or damage may due to transport operations.


If finding missing parts, possible defects or damage due to transport, one should examine damaged cartons according to <<Accessories Packing List.>> to verify the condition of damaged goods and missing parts, also the person in charge or the carrier must be immediately informed.



The machine is heavy goods! Don't take manpower load and unload and transporting way into consideration, the safety of working is important.

Furthermore, during loading and unloading operation goods must be handled as shown in the picture.

(Picture 1)

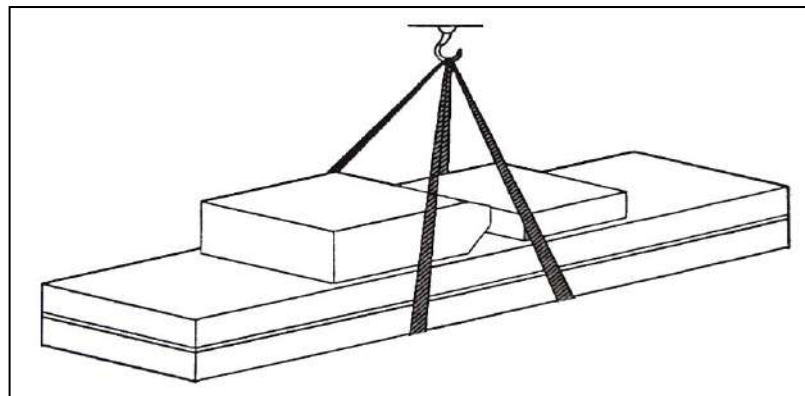

Picture 1 (Goods-lifted)

1.3 Storage

- The machine equipment should be stocked in the warehouse, if stocked outside should do the disposal well of waterproof.
- Use box truck in the process of transport, use container storage when shipping.
- The temperature for machine storage : -25°C-- 55°C

2. Manual introduction



This manual has been prepared for workshop personnel expert in the use of the lift operator and technicians responsible for routine maintenance fitter.

Workers should read the <<Instruction & Maintenance Manual>> carefully before carrying out any operation with the lift. This manual contains important information regarding:

- The personal safety of operators and maintenance workers.
- Lift safety.
- The safety of lifted vehicles.



Several tips should be done by the operator as follow:

1. Well conserving the manual. Manufacturer owns the right to make little change for the manual owing to the improvement of technology.
2. Good disposal the used oil.
3. The machine must be demolished by authorized technicians, just like for assembling

3. Description of the machine

3.1 Machine Application

Two post lift can lift each kind of vehicle whose weight is less than 4200kg, suitable for use in vehicle tests, maintenance and tyre mounting/demounting.



Lifts are designed and built to lift vehicles and hold them in the elevated position in an enclosed workshop. All other uses of the lifts are unauthorized. In particular, the lifts are not suitable for:

- Washing spray work;
- Use in outdoors;
- Creating lifting personnel;
- Use to lift loose-packed and fractured goods
- Use as elevator;
- Vehicle with severely tilted or bent frame, or with deformed wheels.



The manufacturer is not liable for any injury to persons or damage to vehicles and other property caused by the incorrect and unauthorized use of the lifts.

3.2 Structure Features

- Electrical lift oil tube is fully hidden, good-looking appearance.
- The international standard of mechanical safety device and electrical unlocking device are totally united as one.
- Double insurance self-locking protection device, safe and easy operation.
- Using two wire ropes synchronous connection, forcing two slider moving simultaneously, effectively prevent the vehicle tilting
- The lowest lifting height is 110mm, adapted to high-grade car maintenance.
- Equipped with high precision to the lifting arm rotating angle locking device to prevent accidents.
- Heavy loading chain, safe and reliable.

3.3 Equipment

- Machine basement (The position and space of equipment installation)
- Machine frame (The main structure of lift and insurance institution)
- Power unit (Hydraulic control part)
- Control box (Machine-controlled part)

Base structure

- Make of cement concrete structure.

3.4 Frame

- Make of column , lifting arm, and oil hose cover plate.

Power unit

- Make of hydraulic pump、 pump motor and oil box.

3.5 Control box

- Under the control box is hydraulic oil tank and hydraulic pump, valve and other control system.
On the control box is electrical system.

Function of each valve on the power unit	
Name	Function
Gear pump	Extract hydraulic oil and provide high pressure.
Connecting block	Connect the motor and the gear pump.
Motor	Provide power for the gear pump.
Overflow valve	Adjust oil pressure.
Pressure-compensated valve	Control the speed of falling.
Lowering solenoid valve	Control flow of the hydraulic oil.
One-way valve	Control the one-way flow of hydraulic oil.
Ball valve	Debugging and control the returned oil.

Table 2

4. Specifications

4.1 Main technical parameter


Machine type	4T
Machine weight	590kg
Lifting capacity	4200kg
Machine lift height	1910mm
Platform initial height	110mm
Machine height	2850mm
Machine width	3420mm
Machine lifting time	≤45s
Machine descent time	About 45s
Standard power supply	3/N/PE~380V, 50Hz, 16A
Whole machine power	2.2kw
Hydraulic oil	8L corresponds to wearable hydraulic oil
Working temperature	5-40°C
Working humidity	30-95%
Noisy	< 70db
Storage temperature	-25°C~55°C

Table 3


Requirements

- Portland cement with strength grade above C20, the period of desiccation is 15 days
- Clean the basic layer, thickness of concrete ≥ 300mm, the levelness of whole length ≤ 5mm


4.2 External dimension drawing

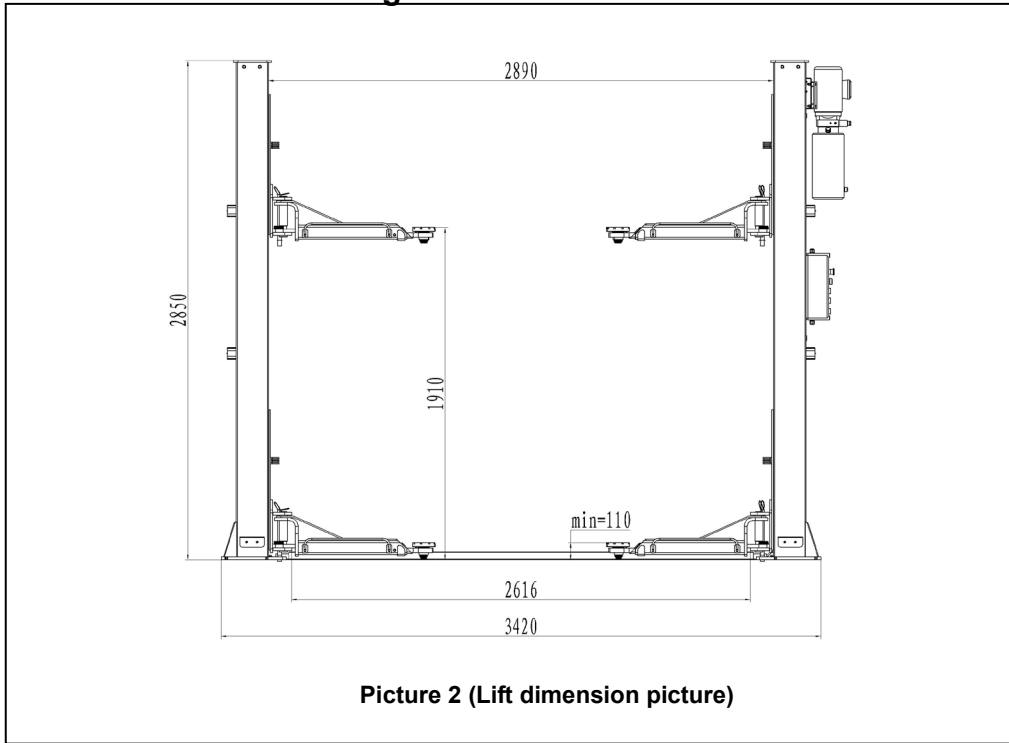


4.3 Lifting arm dimension drawing

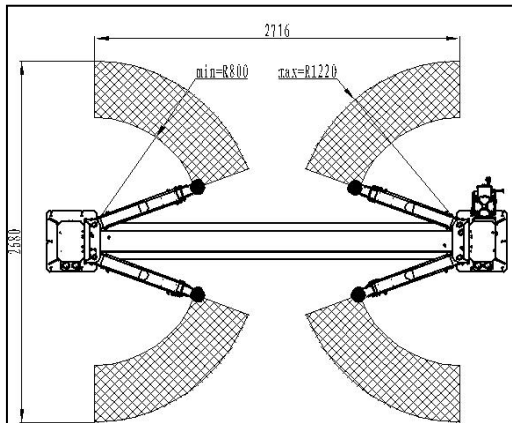


Standard equipment

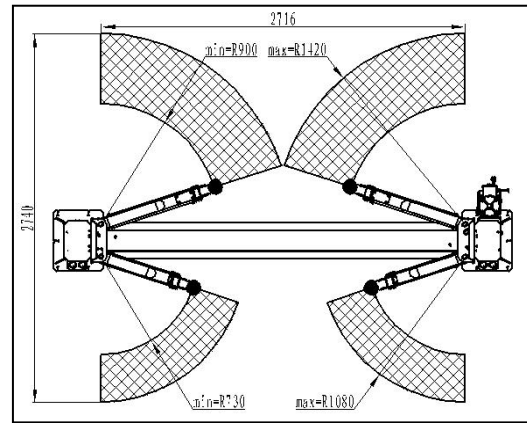

Choosing equipment 1

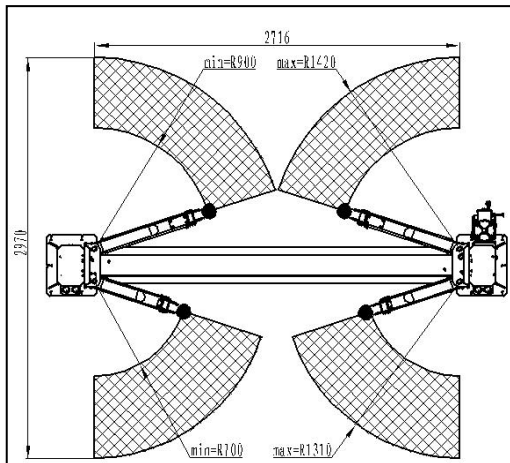

Choosing equipment 2

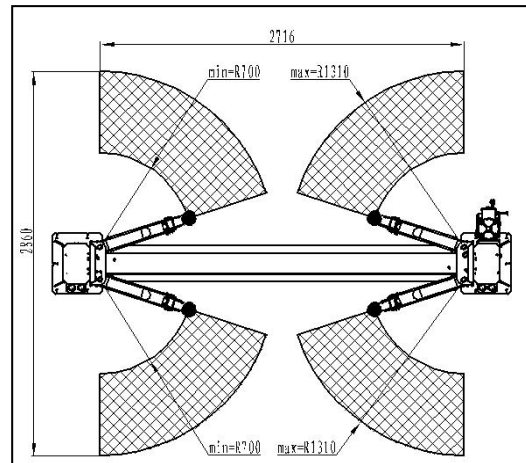

Choosing equipment 3

4.4 Suitable for types of vehicles (For reference only)

This lift is suitable for virtually all vehicles with total weight and with dimensions not exceeding the below data.

Maximum weight not exceed than 4000kg

The dimension of vehicle:

The following diagrams illustrate criteria used to define the operating limits of the lift.

- Pay attention to warning signs

-Each kind of automobile differs in centre-of-gravity position. Centre-of-gravity position of automobile shall be understood at first. When automobile enters the lifter, the center of gravity shall get close to plane formed by both vertical columns. The rocker arm shall be adjusted to allow bearing point to be on bearing surface of car.



The centre-of-gravity position of each kind of vehicle is different. First know about the centre-of-gravity of vehicles. Make the centre-of-gravity close to the plane formed by the two columns when the vehicle drive into the lift. Adjust the lifting arm, make the bearing point support the bearing surface of vehicles.

5. Safety notes

5.1 General precautions



Workers should read the <<Instruction & Maintenance Manual>> carefully before carrying out any operation with the lift



The manufacturer is not liable for any injury to persons or damage to vehicles and other property caused by the incorrect and unauthorized use of the lifts.

The operator and the maintenance fitter are required to observe the prescriptions of safety regulation in force in the country of installation of the lift.

Furthermore, the operator and maintenance fitter must:

- Always work in the stations specified and illustrated in this manual;
- Never remove or deactivate the guards and mechanical, electrical, or other types of safety devices;
- Read the safety notices placed on the machine and the safety information in this manual.



In the manual all safety notices are shown as follows:

Warning: indicates following operations that are unsafe and can cause minor injury to persons and damage the lift, the vehicle or other property.




Risk of electric shock: a specific safety notice placed on the lift in areas where the risk of electric shock is particularly high.

5.2 protection devices



The safety protection devices use to protect the operator in case of overload or machinery failure:

- In the case of overload, the overflow valve of the pump will open, the hydraulic oil will return to the oil tank.
- The mechanical insurance works automatically to prevent the carriage from falling off when the oil cylinder loose pressure.

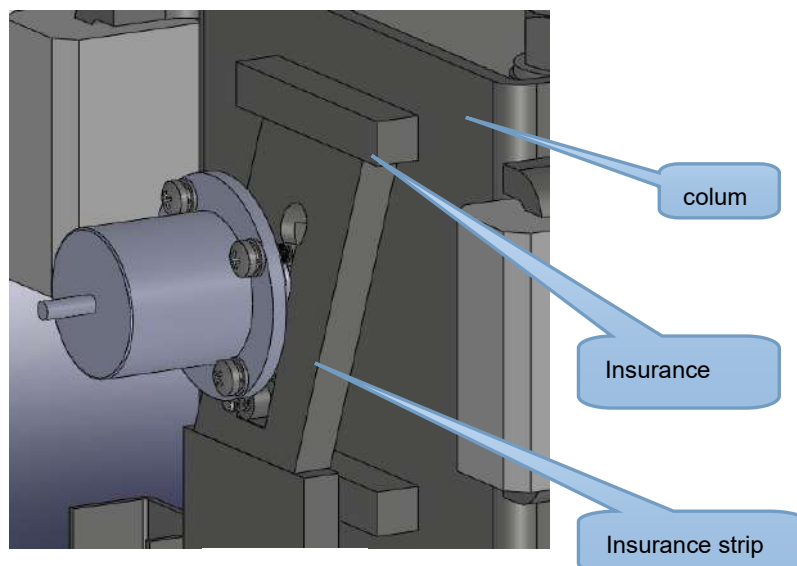

Picture 4

-Operators will hear the sound when the insurance claw falls on the insurance strip in the case of normal use. If not, this machine is prohibited to use. Operator can check the insurance device by opening the decorated box. If the insurance device is blocked, adjust the screw on the insurance claw till the sound can be heard when the insurance claw falls on the insurance strip.

-Only press "LOCK" button after the machine is lifted, vehicle maintenance can be permitted.

-If the two carriages are not in the same plane, adjust the nut on steel cable to keep them in the same plane. Tighten the steel cable, or the two carriages can not be synchronous.

-Locking devices are installed in each lifting arm, it can lock automatically when lifting arm rotate to any needed angle. When the carriage in the lowest position, the lifting arm can rotate freely. In order to prevent the lifting tray from falling, we adopt the adjustable thread lifting tray to make it more safe and convenient



Risk for extrusion

During up and down operations, personnel leave the said area without following the rule and instruction.

During up and down operations, no person is admitted to work beneath the movable parts of the lift, should work in the safe zone.



Risk of impact

Before the operator begins up and down movements, make sure that there are no personnel inside the danger zone. When, due to operational reasons, the lift is stopped at relatively low elevations (lower than 1.75m above the ground) personnel must be careful to avoid impact with parts of the machine not marked with special labels.



Risk of falling (vehicle)

This hazard may arise in the case of incorrect positioning of the vehicle on the lifting arms, overweight of the vehicle, or in the case of vehicles of dimensions that are not compatible with the capacity of the lift.

When the lifting arm is being tested, the vehicle engine can not be turned on.

There is nothing should be placed on the lift-lowering area and the movable parts of the lift.



Risk of slipping

The floor caused by lubricant contamination of around the lift. The area beneath and immediately surrounding the lift and also the platforms must be kept clean. Remove any oil spills immediately. (Picture 14)



Risk of electric shock

Risk of electric shock in areas of insulated and shattered electric equipments

Do not use jets of water, steam solvents or paint next to the lift, and take special care to keep such substances clear of the electrical control panel.



Risks related to appropriate lighting

The operator and the maintenance fitter must be able to assure that all the areas of the lift are properly and uniformly illuminate compliance with the laws in force in the place of installation.

During up and down operations, the operator should continually observe the lift and can operate it only in the position of operator. When lifting and lowering the vehicle, the cushion needs being put in the bottom of chassis.



The handling of safety devices is strictly forbidden. Never exceed the maximum carrying capacity of the lift, make sure the vehicles to be lifted have no load.

6. Machine structure and drive principle

6.1 machine structure :

-This machine is made of column, carriage, lifting arm, spindle parts, safety lock device, oil cylinder, power unit, oil hose, control box and electric wire. mechanical lock and hydraulic lock double safety device ensure its security.

Instruction of each part


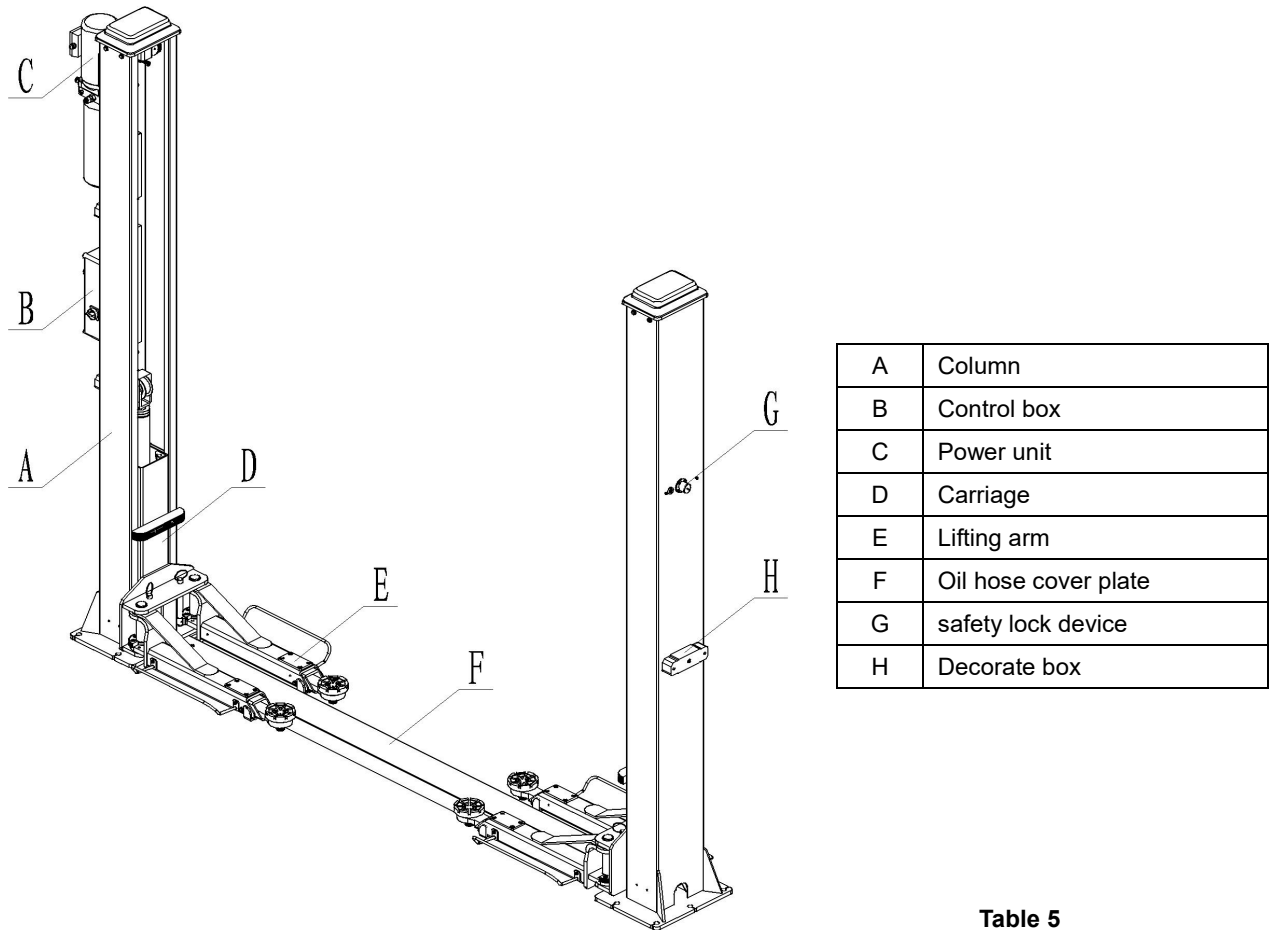


Table 5

6.2 Drive principle :

-Press button "UP", the contactor and motor work. Motor drives the gear pump, the hydraulic oil goes through the one-way valve, oil hose finally reach the in the downward cavity of oil cylinder. The piston rod is pushed by the oil pressure. The oil cylinder drives the lifting arm synchronously with the steel cable and roller wheel and chain.

. When do the vehicle maintenance, operators press the "LOCK" button, the lower solenoid valve works and the electromagnets do not work when the carriages is locked. When lower the lift, press the "DOWN" button, the time relay works, the lift raises for 2-3 seconds and then lower solenoid valve works. The weight of vehicle and lift extrude the hydraulic oil into the oil tank. Finish the lowering operation.

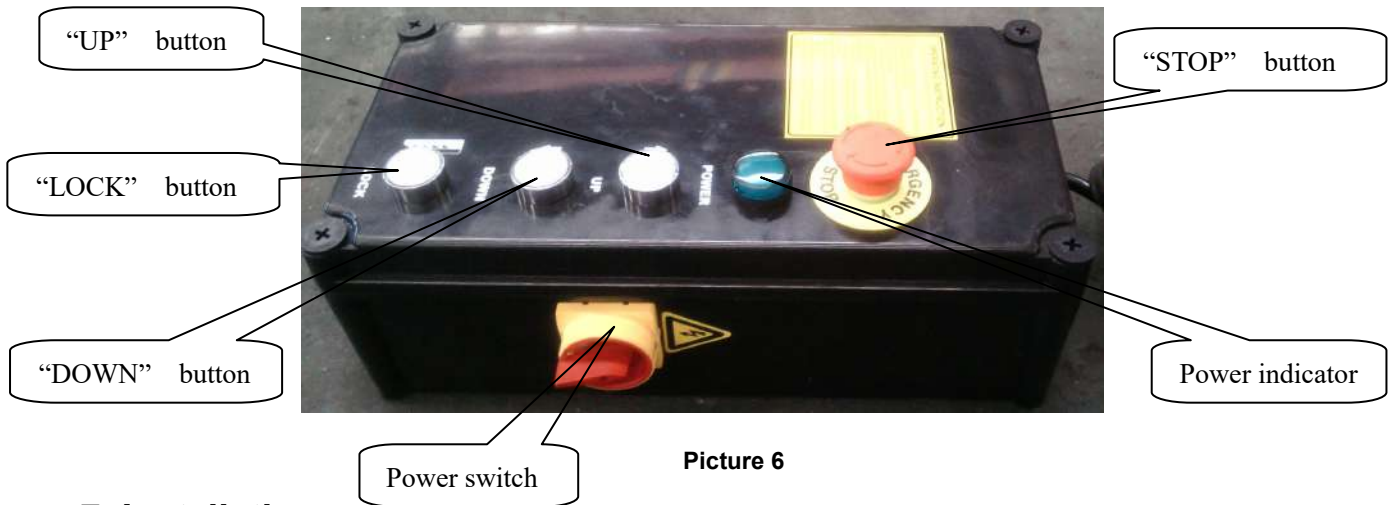

Picture 6

7. Installation


7.1 Installation requirement

-Two post lift must keep install under the safe distance requirement from the wall, column and other equipment. Minim distance from wall is 800mm, consider the urgency situation and convenience work, the distance of exit passageway should considered having enough rooms.

Please make sure there is power supply for the control unit.

The indoor height should not be less than 3150mm.

Indoor ground is available for installation, only the ground level meets the installation requirement and have enough endurance capacity (Concrete grade above C20, concrete thickness must reach 300mm and above), otherwise, please pour concrete 1200 * 4000mm in installation space, thickness must reach 300mm and above.

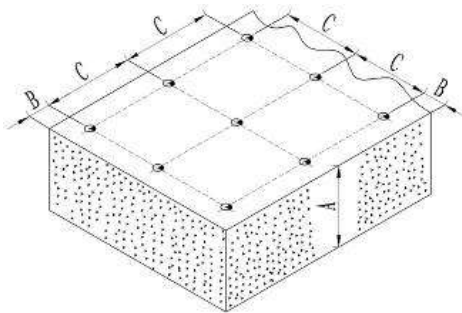

Picture 7

A	Concrete thickness must reach 300mm and above
B	Side- hole to the concrete edge must reach 150mm
C	Machine baseboard installation distance

Table 6

Make sure there is enough and gentle light when install the machine, to ensure a safe work and machine adjustment, do not provide strong light and get eyestrain.


7.2 Base requirement

Portland cement with strength grade above C20, drying period ≥ 15 days.

Clean the raw surface, concrete thickness ≥ 300 mm, ground level degree ≤ 5 mm

Power supply for control unit (380V or 220V)

Foundation drawing

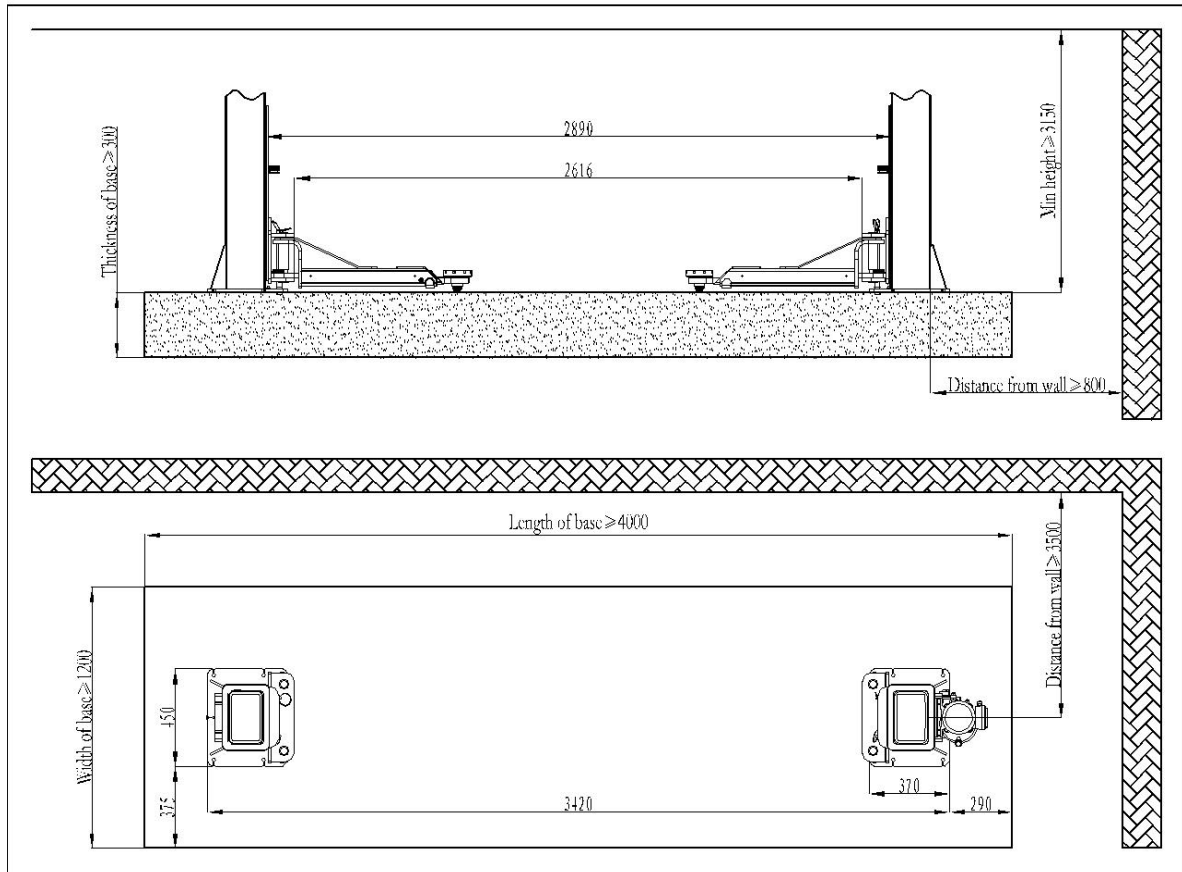

Picture 8



Only the trained and qualified technician is allowed to install the machine, please careful read and follow below instruction before installation, in order to avoid any damage or personal safety.

Examination before installation

Foundation drying period and concrete strength must meet the requirement.

Completeness of the machine (refer to the "packing list")

Power supply connects with the control unit.

Hydraulic oil is qualified

7.3 Installation

Column installation

a. Set up the column

set up the installed main and sub columns on the concrete foundation, with distance at 2680mm which is suitable to install the oil hose cover plate, make sure the two columns are in same level.(refer below picture).


b. Install the expansion bolt

The expansion bolt must work after finished the maintenance of the concrete foundation, otherwise, it will affect the locking quality.


-Adjust the position & vertical degree of the two columns.

-Use a hammer clip with $\phi 18\text{mm}$ impact bit(the length of the bit $\geq 180\text{mm}$) drill the hole from the base plate hole till depth 180 MM, and clean the hole with dust cleaner


- Use the light hammer to knock the expansion bolts to the 10 holes (no need to insert the center expansion nail, fix it after finished the level adjustment)

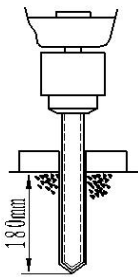


Picture 9

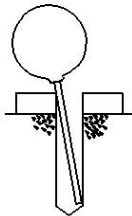


picture 10

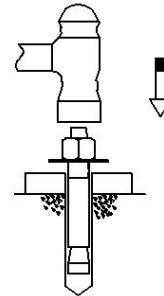

picture 11

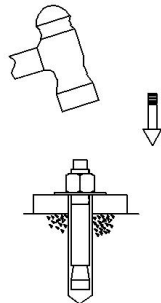

Picture 12

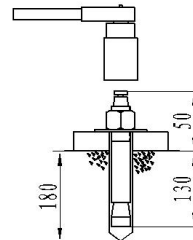

picture 13

c. Level adjustment

- Use a transparent horizontal tube or gradiener to exam the all around level of the master & vice column

- If the foundation is uneven, it can be adjusted by adjusting the pad on the floor mat of the U type.

- If level degree is no problem, insert the center expansion nail, heavy hammer knocks the center expansion nail, tighten the nuts after finished to install the top beam and the master & vice column is still in level degree.




If the concrete foundation is under the maintenance, please do not knock in the center expansion bolt. The space between the base plate and ground must fill with cement mortar after adjust the level degree.

Steel cable installation.

- After pull the synchronous steel cable 1 (that draw from the lifting carriage of main vertical column) pass the bottom of column steel cable pulley roller B, through the bottom of sub column steel cable pulley roller B, upward through the sub column top beam pulley roller A , then fix the steel cable by M16 nut in the hole of the fixed plate E ,which on the carriage of deputy vertical column. Similarly to draw the steel cable 2 from the lifting carriage of deputy vertical column , and fixed it in the hole of the fixed plate E , which on the main vertical column carriage.
- Check the left carriage and the right carriage, watch if they are at the same height. If not, please loose the nut that located on the hole of fixed plate C, which on the main vertical column. And then make the carriage of main vertical column drop down. Or tighten up the nut that located on the hole of fixed plate C, which on the deputy vertical column. And then make the deputy vertical column lift up. Similarly, when the carriage of main vertical column is lower than the one of deputy vertical column, reversed adjustment



The adjustment is required to both reach to the same height, two carriage (left and right) must be in the same height, the steel cable must be tighten up, not allow any loose, moreover, the steel cable must be inside the skating slot of steel cable roller, parallel to each other, not allow any cross, otherwise, two carriages can't have synchronization effect. Please as per following photo:

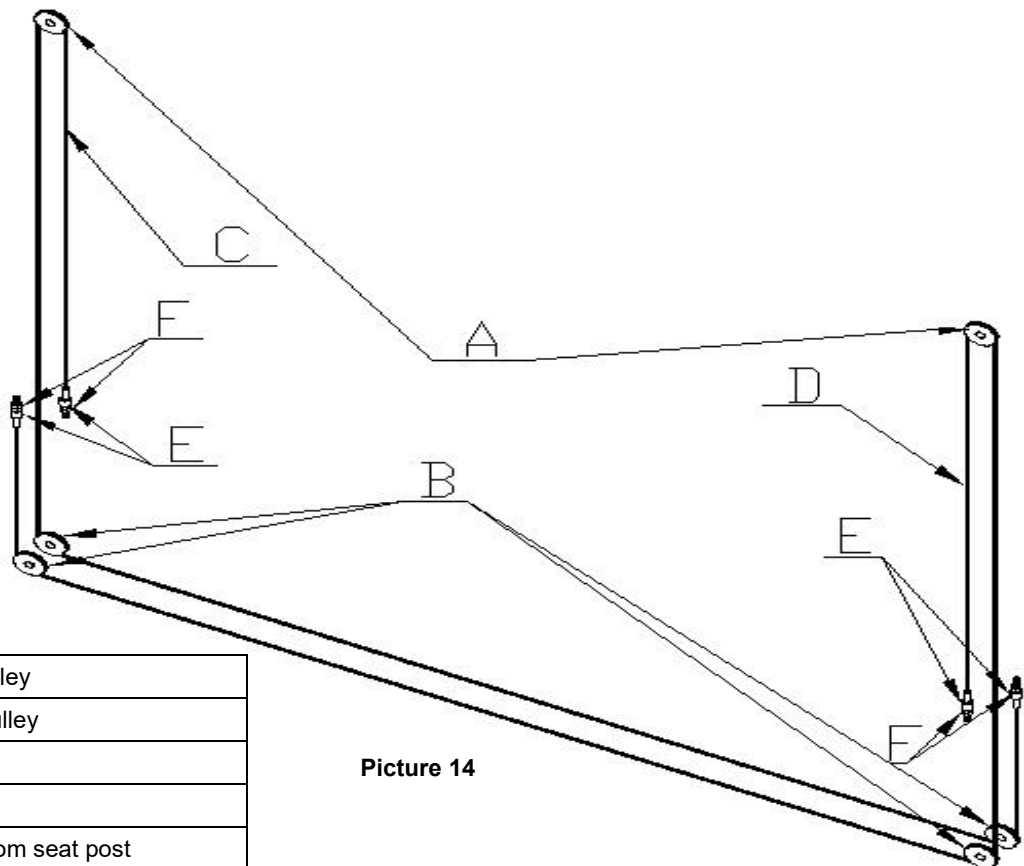


Picture 14

A	Top beam pulley
B	Base plate pulley
C	Steel cable 1
D	Steel cable 2
E	Wire rope boom seat post
F	M16 nut

Install the complete insurance device assembly


- Install the insurance electromagnet assembly on the column.
- Insurance block set on the electromagnet assembly on the inside of column.

A	column
B	Electromagnet
C	Φ5 flat washer
D	Φ5 spring washer
E	M5×12 cross pan head screw

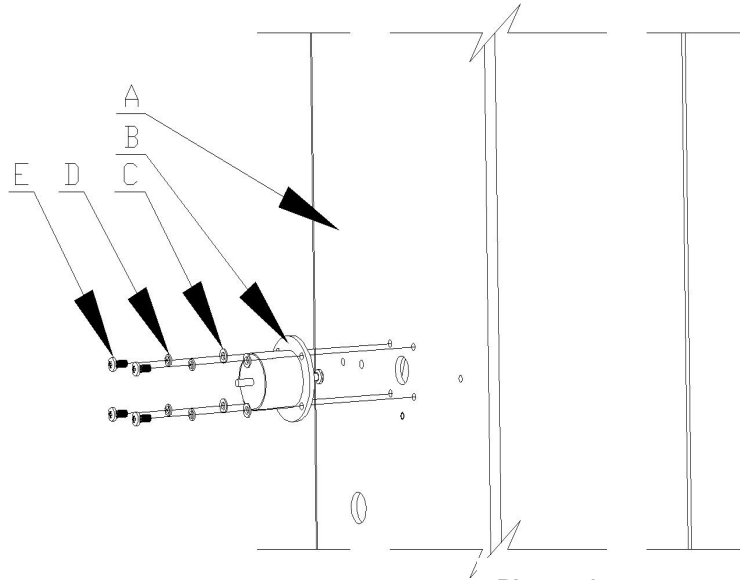

Picture 15

Blocking insurance installation schematic

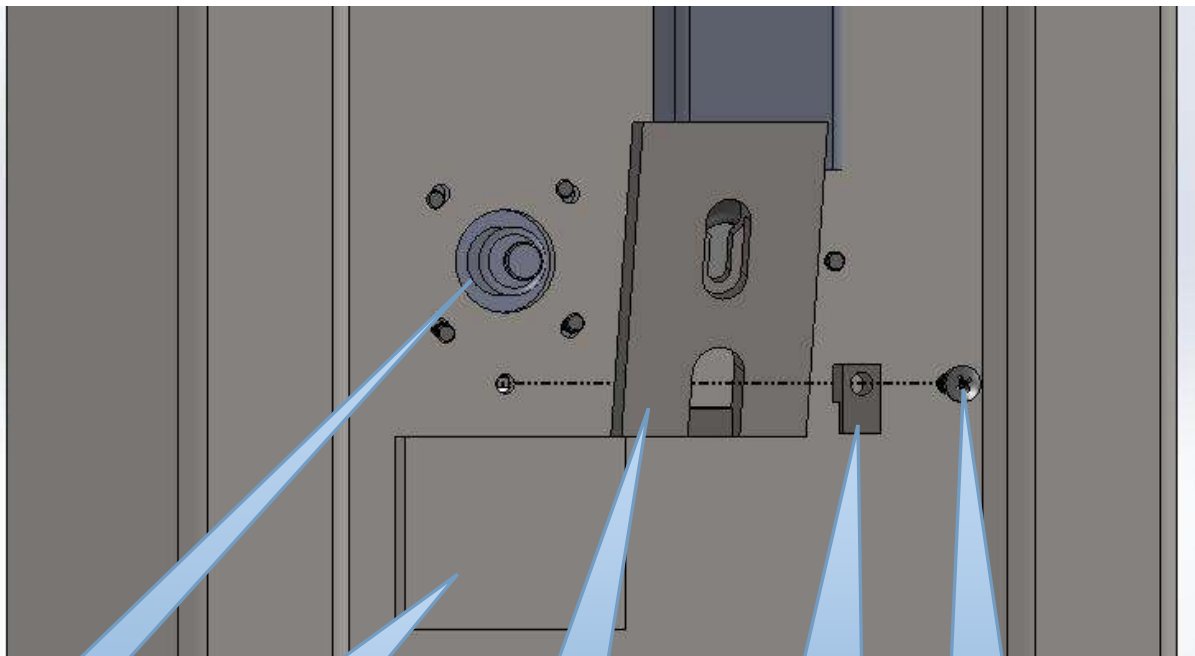

Electromagnet

Insurance support plate

Insurance block

Insurance cushion block

Cross pan head screw M5*16

Picture 16





Test the flexibility of insurance device after installation, any phenomenon of blocking insurance device is not allowed

Install the power unit.

- Install the two bolts on the power unit, do not locking, there should be a certain gap
- Then installing the power unit from the motor hanging hole D to the main column
- Install the two remaining bolts from the holes of power unit

A	φ8 nuts
B	φ8 spring washer
C	φ8 flat washer
D	M8×35 full thread hex flanges bolt
E	motor cushion

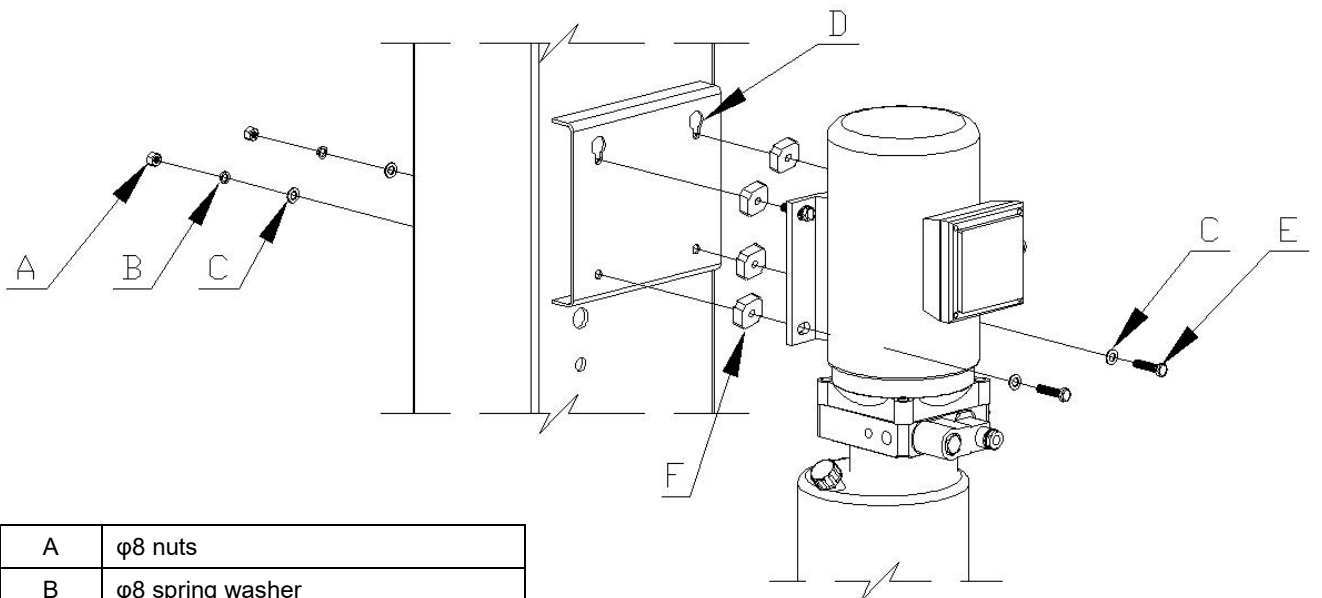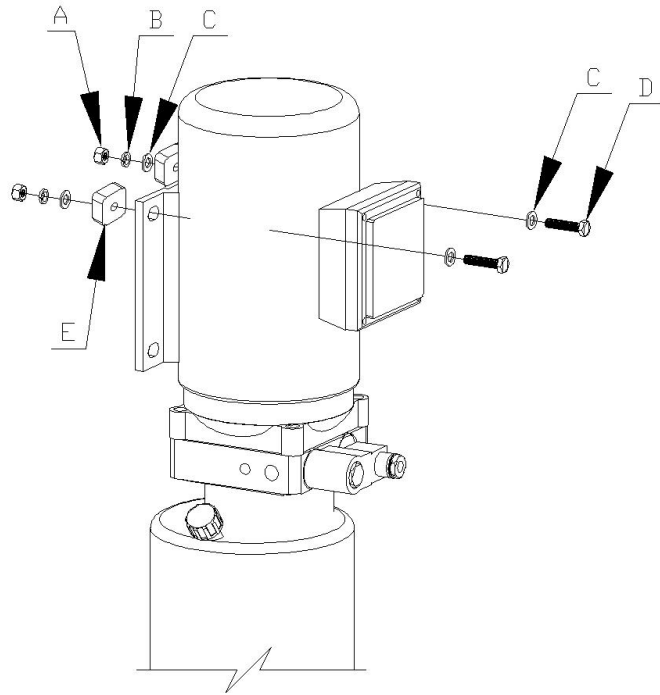

A	φ8 nuts
B	φ8 spring washer
C	φ8 flat washer
D	Motor hanging hole
E	M8×35 full thread hex flanges bolt
F	motor cushion

Picture 17


Lifting bracket arm installation

-Two post lift equipments symmetric arm, which are installed on the main carriage and sub carriage.

Bracket arm installation steps:

- First, take down the semi-circle block and arm bolt which installed on the lifting bracket, put aside.
- Then, install the lifting bracket arm B on the carriage's support lug, insert arm bolt A , make the downside slot of both arm bolt and arm support lug just on the same level. Please as per below photo:

A	Arm bolt
B	Lifting bracket arm

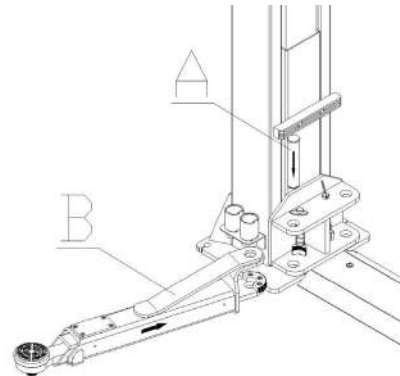


Picture 18



Aligning the hole, arm bolt needs vertical align with the hole to install

A	Bracket arm bolt
B	Long bracket arm

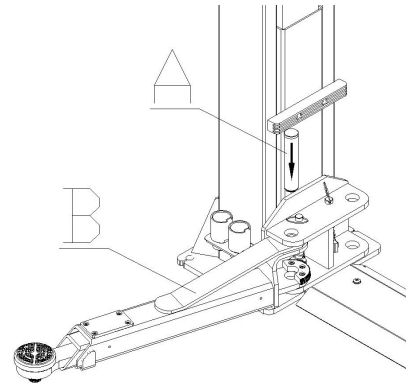


Picture 19



There are five mounting holes in the downside arm support lug, it can adjust semi-circle block and teeth block meshing well

And then, install the circlip for shaft A at the lower end of the shaft.


A	Circlip for shaft
---	-------------------

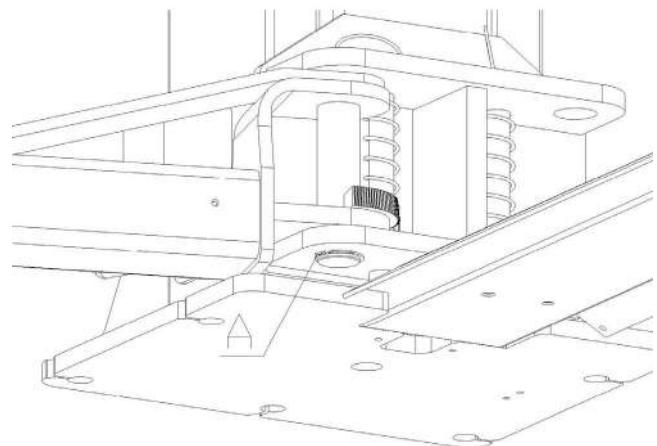

Picture 20

Lifting arm assembly diagram


A	Lifting bracket arm
---	---------------------

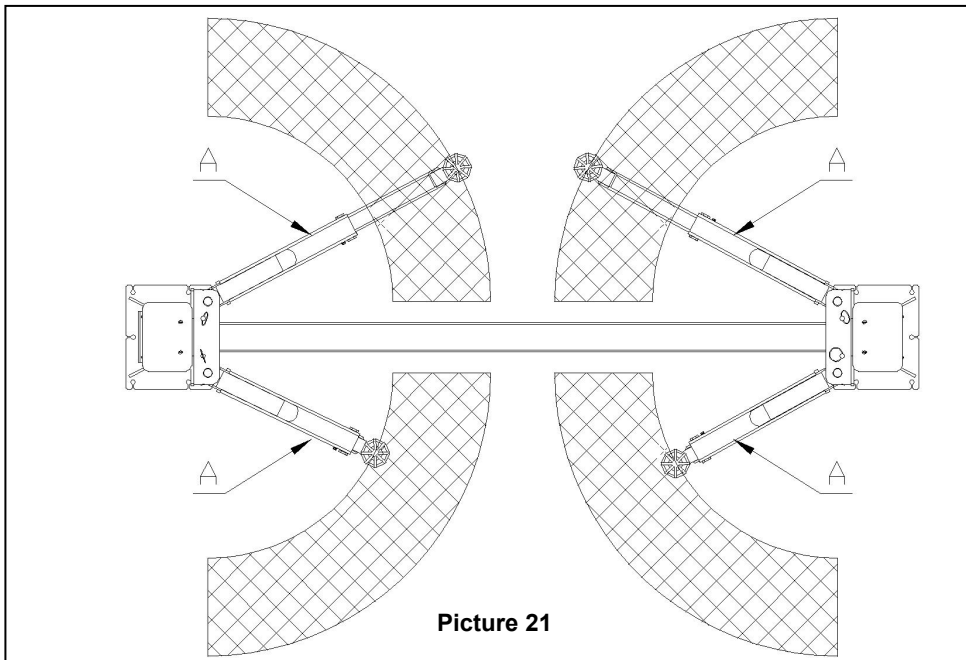


Picture 21

Anti pin assembly step

- The anti - pressure foot assembly mounting hole corresponding to the mounting hole on the bracket
- Lock with M6 * 12 internal six angle cylinder head screws, as shown in the following diagram:

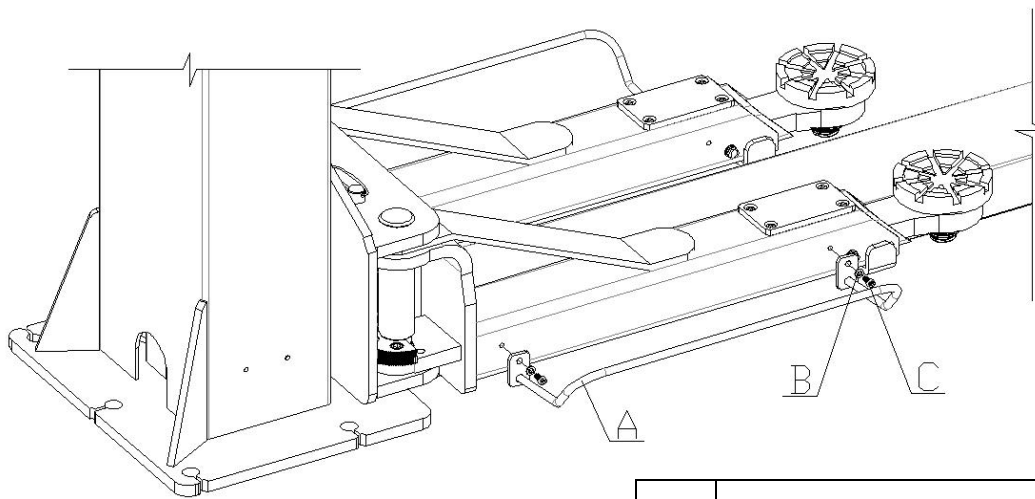


A	Anti pin component
B	Φ6 flat washer
C	M6×12 inner six angle cylinder head screws

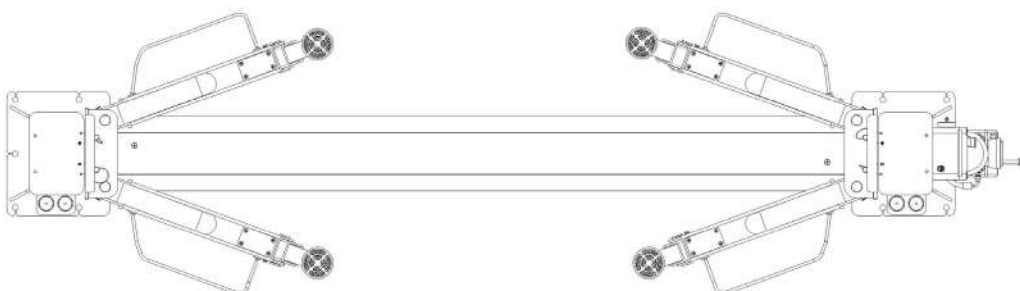

Hydraulic oil hose clamp installation

Hydraulic connection:

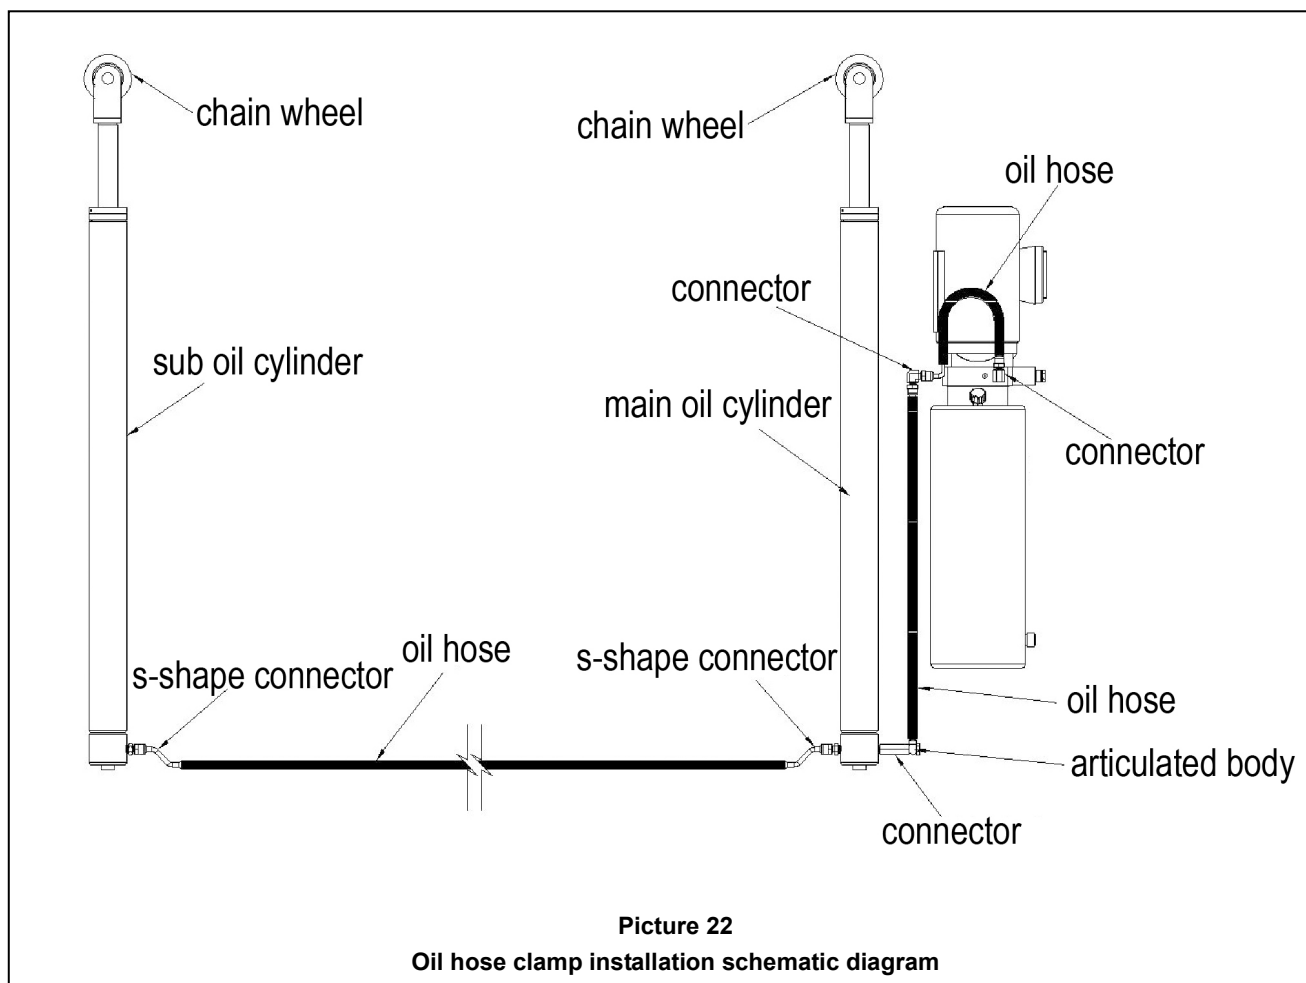

Only the trained and qualified technician is allowed to install the machine,

Please pay more attention oil hose clamp connection protection, in order to prevent foreign body into the oil tube failure.

- High pressure tubing from the pump outlet connected to the 90 ° bend clapboard connector(Please refer to above hydraulic connection)
- High pressure tubing from the 90 ° bent bulkhead connector from the hose connector on the master cylinder
- Finally main oil cylinder with sub oil cylinder connect the high pressure oil tube
- Tightening the oil connector, to avoid it oil leaking
- When connecting tubing, attention to the oil connector protection, prevents foreign bodies from entering the hydraulic circuit

7.4 Electrical Circuit Connection:

Electrical circuit should be connected in accordance with the wire diameters and line numbers specified in the Electrical Wiring Diagram.



Only electrical professionals are qualified in the operation of electrical installation work.

- As per the wire diameters and line numbers specified in the Electrical Schematic Diagram, connect the electrical

circuit.

-Make sure the power switch is off and hang the warning sign "DON'T TURN ON THE POWER".

-For 380V, wire the 4×1.5mm² cable of the control box to the power input terminals.

-For 220V, wire the 3 × 2.5mm² cable to the power input terminals.

-Connect bicolor ground wire to the grounding bolt.

-Circuit connection for safety electromagnet: Insurance electromagnets mounted on the column, wires from the slot through 4 insurance in electric magnet in parallel connected to the control box Terminal

-Circuit connection for limit switch: The limit switches are installed the top of the main column, wires from the slots on the cross on the control box Terminal

- Decreased solenoid valve coil connection: Decreased power unit solenoid valve coil wires from the column slot through terminals in the control box

8. Commissioning

8.1 Fill hydraulic oil

After the hydraulic and electric circuits have been connected as instructed, operate as per the below steps:

-Fill 8L **corresponds to wearable hydraulic oil** (supplied by the user) into the oil tank.



Before filling, ensure the hydraulic oil is clean, in order to prevent any impurities from entering the oil-way and causing it block.

8.2 Commissioning

Check Phase Sequence:

-Turn on the power switch on the control box and the power indicator lights. Press the UP button to see if the lifting slipways go up or not. If not up, cut off the power and adjust the power phase sequence to enable the oil pump to supply oil normally. Then check if the joints between the oil pipe and the oil cylinder leaks oil or not. If yes, check if the joints loosen or not.



After the power is turned on, there is a possibility of high voltage electric shock in the control box. Thus this operation should be engaged by authorized professionals with qualifications and experience in electric operation, to avoid the risk of electric shock.

No-load Test:

- Press the UP button SB1, and observe if the main and auxiliary carriages are in the same height or not, while the lift carriages and arms are rising. At the same time, listen to the safety block's sound and judge the position of slipways is high or low. Readjust the steel cable correctly to make the safety blocks' position in the same height. That is, the main and auxiliary slipways are in the same height.

- Press the DOWN button SB2. The oil pump works, the carriages rise first, the time relay is electrified, the mechanical lock and the drop solenoid valve will open in 2-3 seconds, and the hydraulic oil inside the oil cylinder is pressed back to the oil tank by the weight of working table. Then the decline completed.

- Press the LOCK button SB3. The drop solenoid valve is electrified, and the mechanical lock is not energized. Then the slipways decline and the mechanical lock reset under the mechanical spring force to lock the slipways. The Locking completed and next operation can start safely.



During no-load test, observe if the host lifting is stable or not, the mechanical lock is properly placed or not, and the oil-way leaks oil or not.

Load test:

-lubricating grease shall be applied to each lubricating point and surface. In addition, the inspection on whether oil

leakage phenomenon exists in oil-way or whether the foot margin assembly is fasten. After the above is normal, the load test can be carried out.

-Drive the vehicle that weighs within its outmost lifting capacity between two posts, persons shall not approach the vehicle, put pads on lifter arm.

-Press UP button SB1, rise the carriage, observe whether the vehicle rise steady or not.

- Press DOWN button SB2, observe whether the vehicle lower steady and smooth or not.

-Check whether the rack and pump station got abnormal noise or not, press LOCK button SB3, observe the insurance assembly works well or not.



Make sure the safety lock of the lift is engaged before start working under the vehicle and no people under the vehicle during lifting and lowering process.

The testing vehicle weight can not exceed the maximum weight of the lifting capacity.

Check whether oil leakage phenomenon exists, stop using the machine when find abnormal situation, test the machine after trouble is shot.

After load test, the length of steel cable will be slightly extended. Thus, the leveling shall be carried out once again. The machine can be put into use after step 7.3.2 is repeated.

9. Operation



Only these qualified people, who have been properly trained, can operate the lift.

Please inspect the machine according to the following cautions before operating the machine.

9.1 Pre-commissioning:

-The barriers around lifter and people inside of vehicle shall be removed before work.

-Observer whether the two carriage up-and-down smooth and synchronization or not;

-Whether the machine's insurance claw works flexible and reliable or not;

-Whether the oil tank, oil pipe, connector leaks or not;

-Whether the running sound of motor, pump is normal or not.

-The weight of vehicle capacity can never be beyond lift capacity of the lifter.

9.2 Operating process:

-Drive the vehicle that weighs within its outmost lifting capacity between two posts, speed should be kept in 5 km/h.

-Stop the car, the manual brake of car shall be well pulled, adjust the arm and pad, make sure the supporting point support the surface supporting of the vehicle.

-Press UP button, lift the vehicle 200~250MM upper from the ground, check whether two carriage are synchronous and if there is other abnormal situation or not.

-Continue pressing UP button, lift the vehicle to the desired height

-Observer whether the two carriage are synchronous or not, and if there is other abnormal situation, stop using the lifter, reuse it after trouble is shot

-It's required to "LOCK" the machine when care and maintenance the lifter, and make sure the two carriage are locked at same height, the vehicle maintenance can be carried out after the lifter is locked.

-Before lowering the lifter, observe whether there are foreign matter or person around lifter, carriage or inside of vehicle or not.

-Press DOWN button, time relay electrified, the mechanical lock and decline solenoid valve open 2~3 seconds later, then the carriage is lowering. when insurance claw trip out from the hole of insurance rack, otherwise the lifter can not descend.

- Lower the carriage to its lowest position and do remember to cut off the power source when service finishes.

9.3 Electrical operation instructions:

Lift raising

-Press UP button SB1, motor drives the gear pump work, cylinder piston drives the platform move up, the carriage is raised

-Loosen SB1, the cylinder stop working and carriage stop rising.

Lift lowering:

- Press DOWN button SB2, oil pump work and carriage rise at first, time relay electrified, the mechanical lock and decline solenoid valve open 2~3 seconds later, then the carriage is lowering.

-Loosen SB2, the mechanical lock and decline solenoid valve are shut off, the carriage stop lowering.

Lift locking:

- Press LOCK button SB3, the carriage is lowering, when insurance claw fall over to hole of insurance rack, the carriage stop lowering and locked.

10. Maintenance and care

Skilled personnel only is allowed to perform the operations

Daily checking items:

The user must perform daily check. Daily check of safety system is very important – the discovery of device failure before action could save your time and prevent you from great loss, injury or casualty.

- Always wipe clean, keep the machine clean.
- Clear barriers and ground oil, keep the working condition clean.
- Check the integrity of each safety devices, ensure the motion is flexible and reliable.
- Check the reliability of limit switch motion.
- Check whether oil/air leakage of the machine exist.

Weekly checking items

- All bearings and hinges on this machine must be lubricated once a week by using an oiler
- Check the working conditions of safety parts.
- Check the amount of oil left in the oil tank. Oil is enough if the carriage can be raised to highest position. Otherwise, oil is insufficient.
- Check whether the expansion bolts well anchored.

Monthly checking items

- The safety gear, the upper and lower sliding blocks and other movable parts must be lubricated one month.
- Check whether the foundation bolts well anchored.
- Check the abrasion and leakage of oil/air hose.

Yearly checking items

- The hydraulic oil must be replaced one time each year. The oil level should always be kept at upper limit position.
- Check abrasion and damage of all the active parts.
- Check the lubrication of **sliders**. Lubricate it if drag phenomenon exist.



The machine should be lower to the lowest position when replace hydraulic oil, then let the old oil out, and should be filtering the hydraulic oil.

-Each team checks the agility and reliability of pneumatic safety equipment.

Storage after use

When the machine does not use for a long time:

- Cut off the power supply.
- Lubricate all the active parts.
- Drain the hydraulic oil of oil cylinder, oil hose and oil tank.
- Sheathe the machine with dust-proof cover.


11. Trouble shooting table




Skilled personnel only is allowed to perform the operations

Failure Phenomena	Cause and Phenomena	Resolutions
The motor does not run in lifting operation.	①Power supply is abnormal	Check and correct wire connection
	②There is a short in the AC contactor in the circuit	Check the wire of AC contactor
	③The limit switch is broken	Check the limit switch, wires and adjust or replace the limit switch.
The motor has noise but can not run	Motor phase loss	Stop run the motor and check the wire
In lifting operation, the motor runs, but there is no lifting movement.	①The motor turns reverse.	Change the phases of the power supply wires.
	② The amount of hydraulic oil is not enough.	Add hydraulic oil.
	③There is some air in the pump due to the transport, causing the air block-up	Dismount the one-way valve and raise the lift a little(pay attention to the oil). Mount the one-way valve if the oil outflow from the hole.
	④ Some block in the valve element of oil return solenoid valve	Clean the valve element
	⑤Seal rings in the oil pump outlet are damaged	Demount the gear pump and replace the seal rings
	⑥Motor runs heavily. Out net of oil filter blocks seriously	Clean the oil filter
The lift raises slowly	Seal rings in the oil pump outlet are damaged	Demount the gear pump and replace the seal rings
The lift trembles in the lifting operation	①There is some air in the oil hydraulic circuit	Raise the lift up and down to exhaust the air
	②Air leakage on the upper connector of absorbing oil hose	Check the absorbing oil hose of oil pump
	③The oil filter blocks	Clean the oil filter
The lift can raise but can not fall	①The button is out of order	Replace with hydraulic oil in accordance with the instruction book.
	②The insurance claw is not divorced from the insurance plate	Check the electromagnet, replace it if it is damaged. If not, adjust the insurance to make it normal


12. Circuit diagram

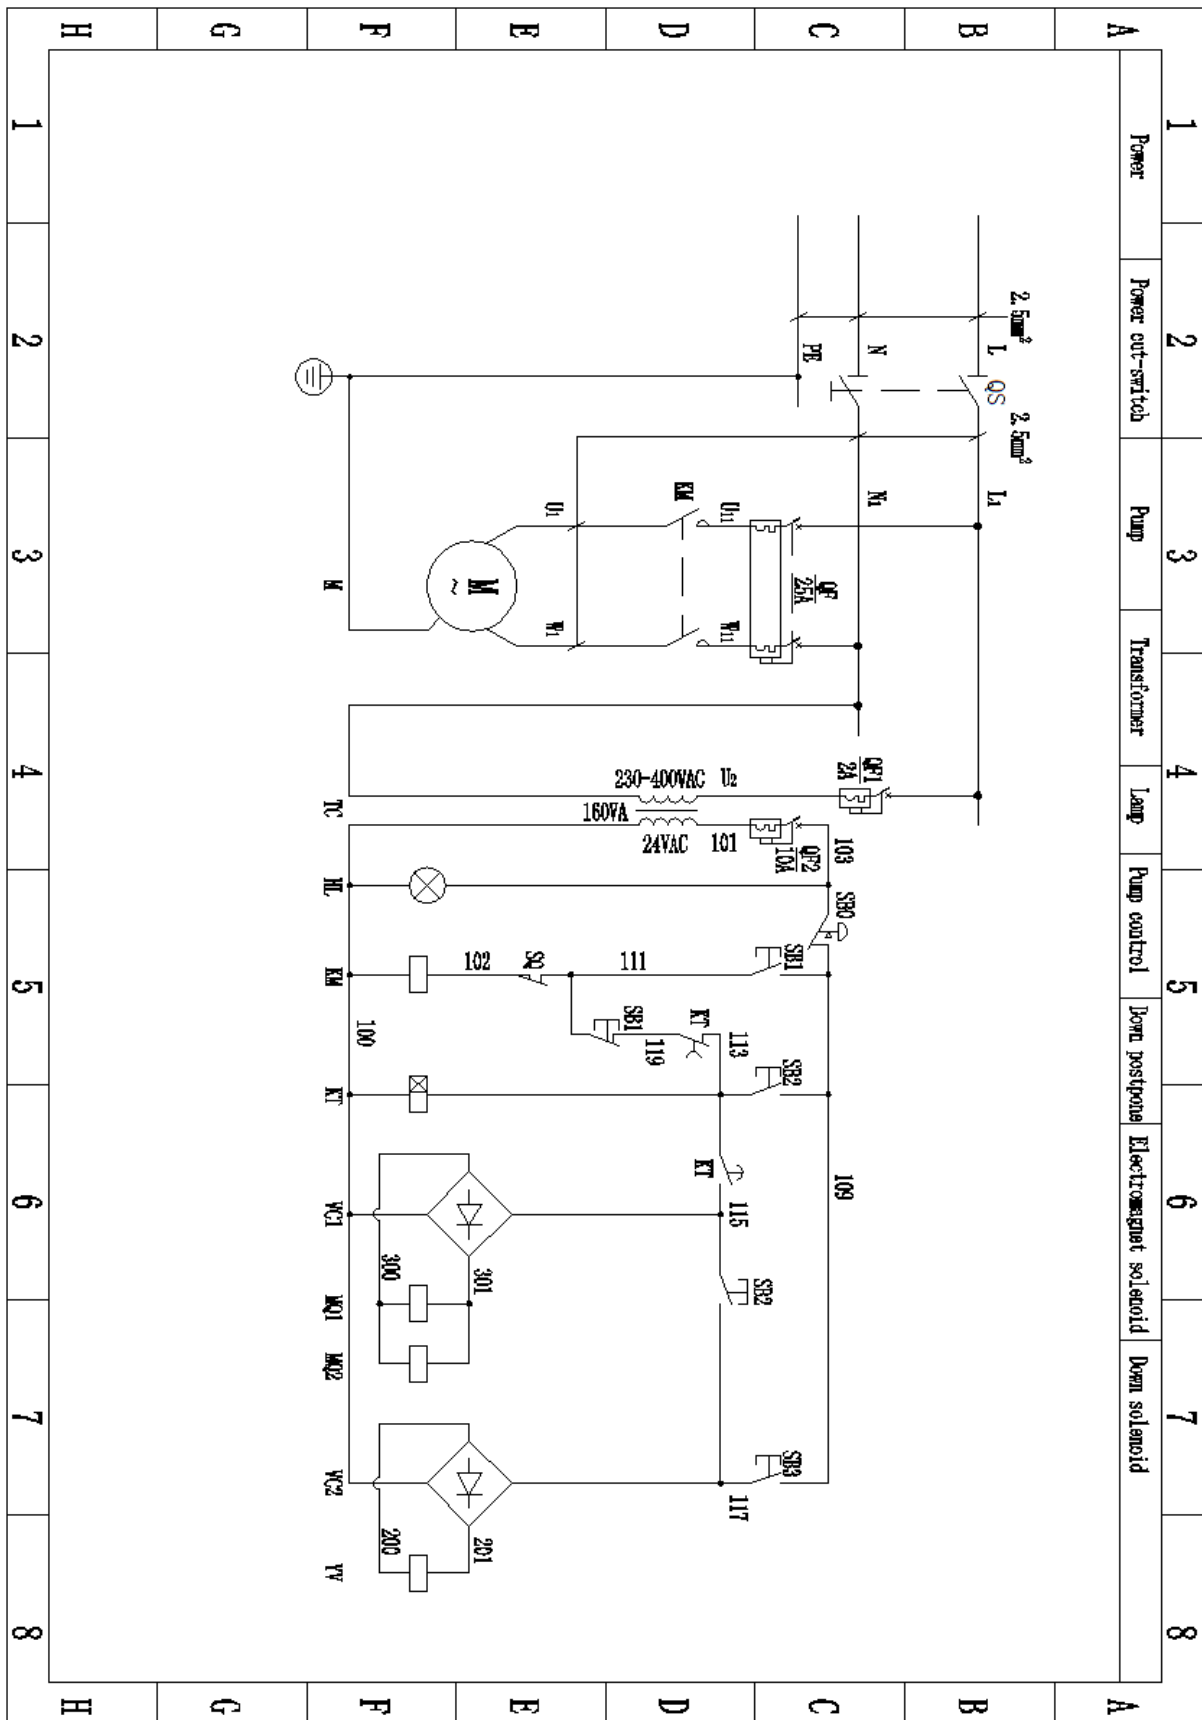

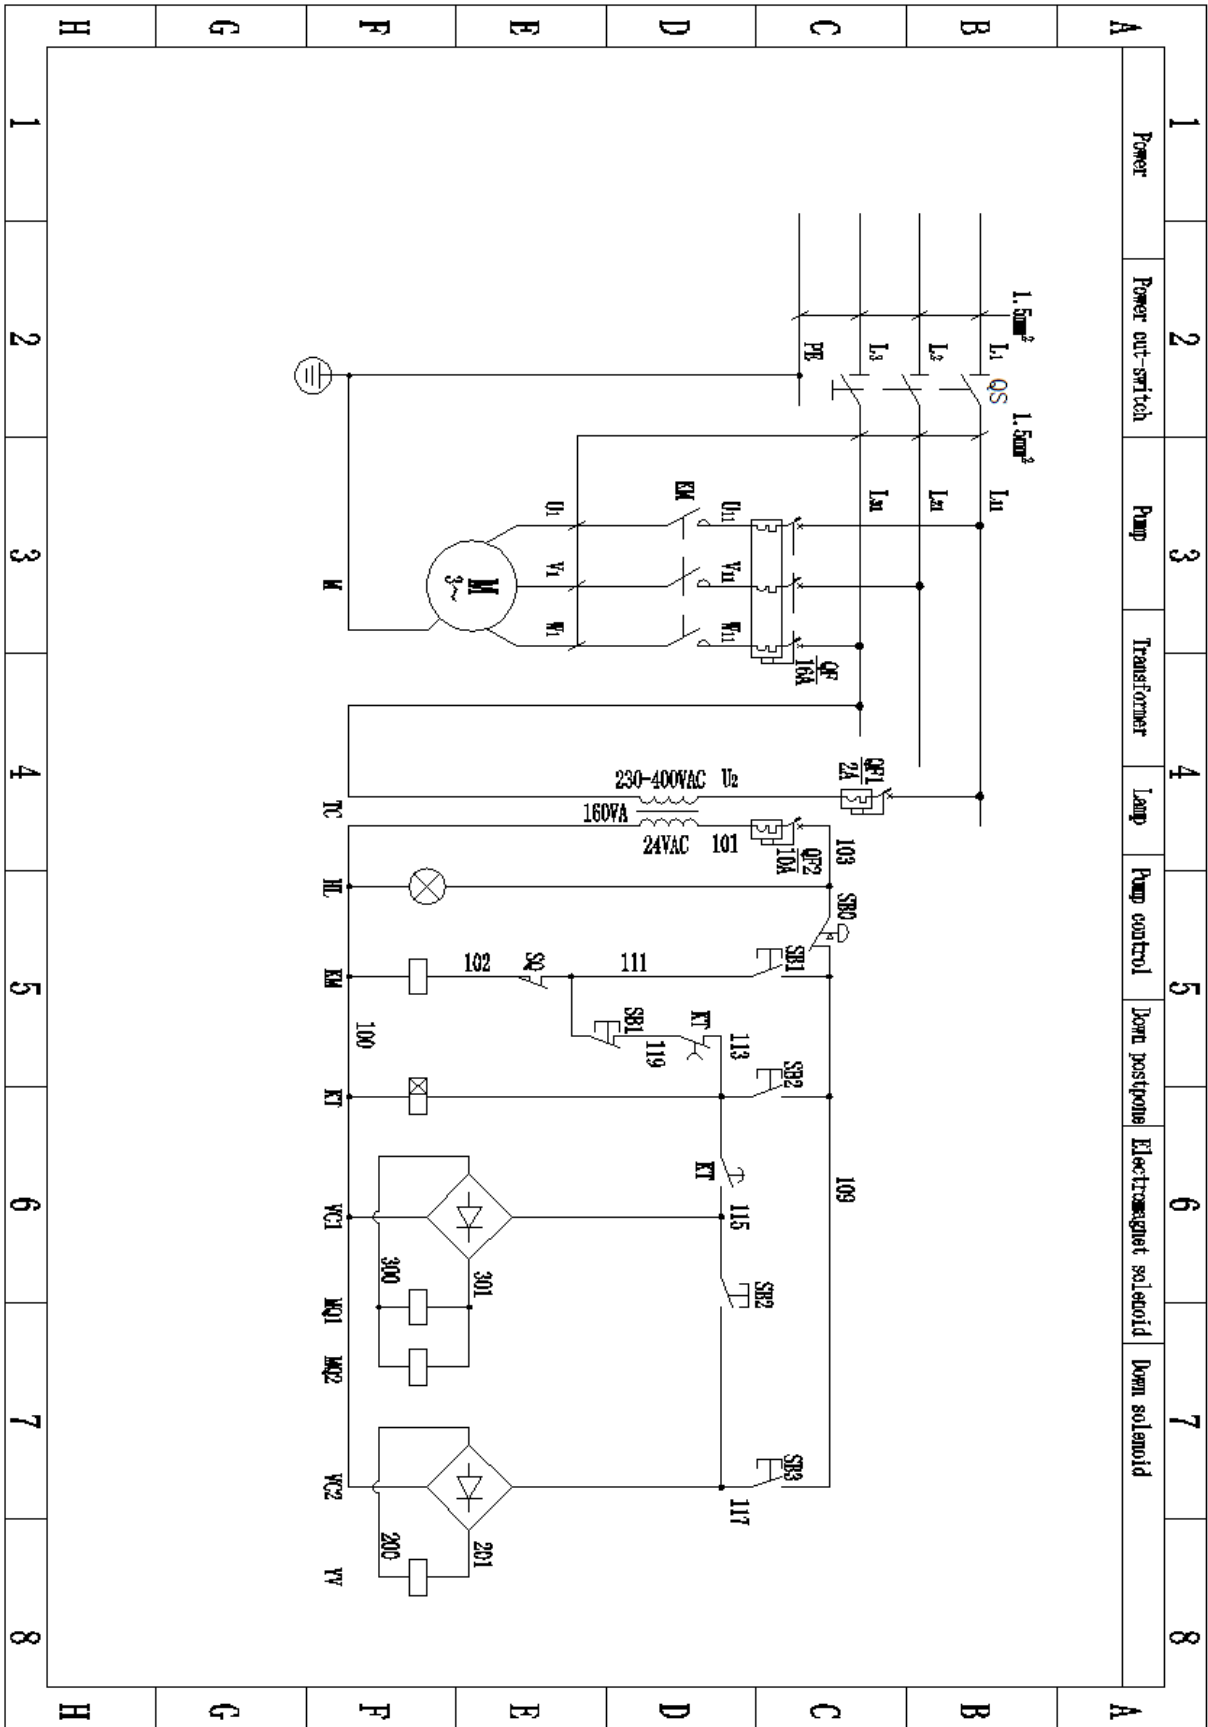


13. Explosion drawing


T40EB	
A	Column
B	Carriage
C	Lifting arm
D	Top beam
E	Oil cylinder
F	Wire rope
G	Oil pipes
H	Power unit
I	Control box
J	Higher column

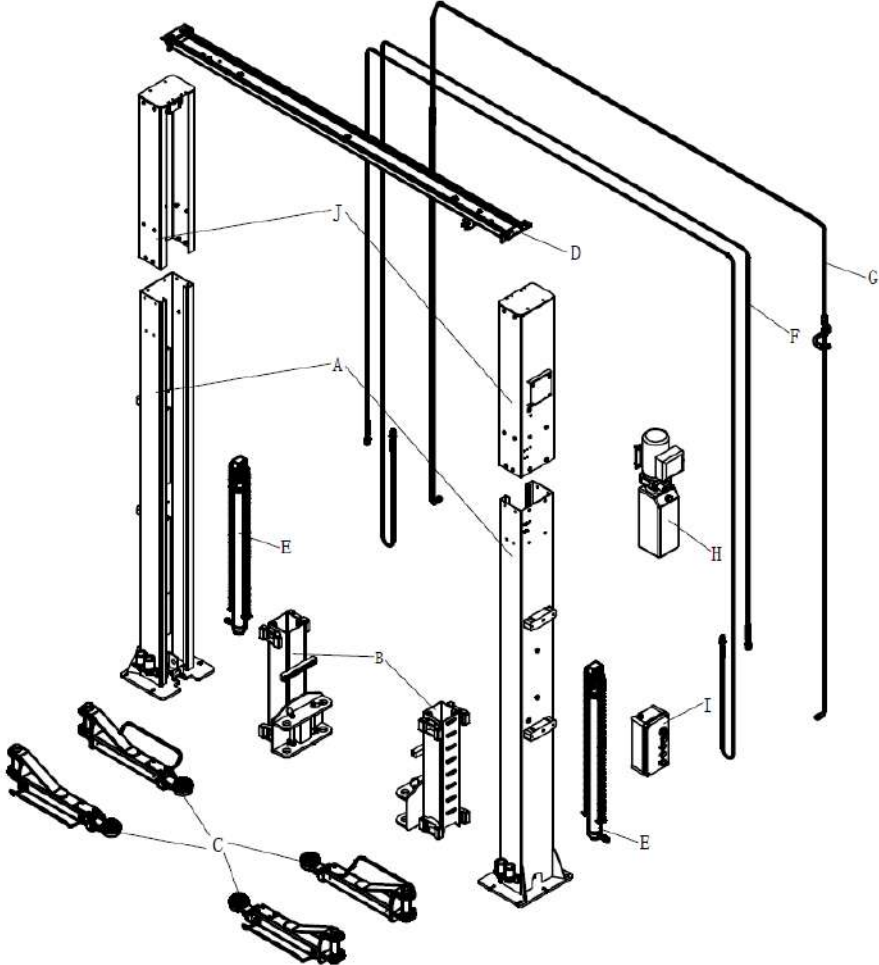


A T42E/20220 7	A1	/	UT42E-04	main column assembly
	A2	/	UT42E-05	sub column assembly
	A3	FJ04009004773	GB/T5781 M10×35	hexagon head bolt full thread M10×35
	A4	FJ04002003800	GB/T95 Ø10	plain washer Ø10
	A5	FJ04002003772	GB/T93 Ø10	spring washer Ø10
	A6	FJ04008004493	GB/T41 M10	hexagon nut M10
	A7	JZ08030022088	UT40E-07	top plate assembly
	A8	JZ07030020995	UT40E-00-19	column cap
	A9	JZ03030016424	UT40E-00-2	roller
	A10	JZ03030016421	UT40E-00-18	steel cable damper
	A11	FJ04009004846	GB/T5781 M5×10	hexagon head bolt full thread M5×10
	A12	FJ04001003747	GB/T894.1 Ø25	circlip for shaft Ø25
	A13	FJ02011003675	282515	shaft steel sleeve 282515
	A14	FJ04008004513	GB/T41 M6	hexagon nut M6
	A15	FJ04002003789	GB/T93 Ø6	spring washer Ø6
	A16	FJ04002003889	GB/T95 Ø6	plain washer Ø6
	A17	JZ09030024203	M6×100	dust cloth hanger
	A18	JZ09030024197	UT40E-00-21	dust cloth 2725
	A19	FJ04002003880	GB/T95 Ø5	plain washer Ø5
	A20	FJ04006004347	GB/T818 M5×6	cross recessed pan head screw M5×6
	A21	FJ04006004337	GB/T818 M5×12	cross recessed pan head screw M5×12
	A22	FJ04005004001	Ø6	unilateral card Ø6
	A23	DD0300900159 3	LXJM1-8104	limit switch
	A24	FJ04002003787	GB/T93 Ø5	spring washer Ø5
	A25	FJ04006004339	GB/T818 M5×16	cross recessed pan head screw M5×16
	A26	JZ03030016419	UT40E-00-6	small insurance block
	A27	JZ03030016417	UT40E-00-5	insurance block
	A28	FJ03001003703	MQZ2×5N×12m m	electromagnet MQZ2×5N×12mm
	A29	JZ09030024207	UT40E-00-3	decorate box
	A30	CF0300200104 8	UT40E-00-20	coil 26
	A31	JZ09030024249	UT40E-00-42	seamless pipe higher column 70mm
	A32	JZ08030022083	UT40E-00-15	higher column support
	A33	FJ04006004040	GB/T14 M6×20	cup head square neck bolt with large head M6×20

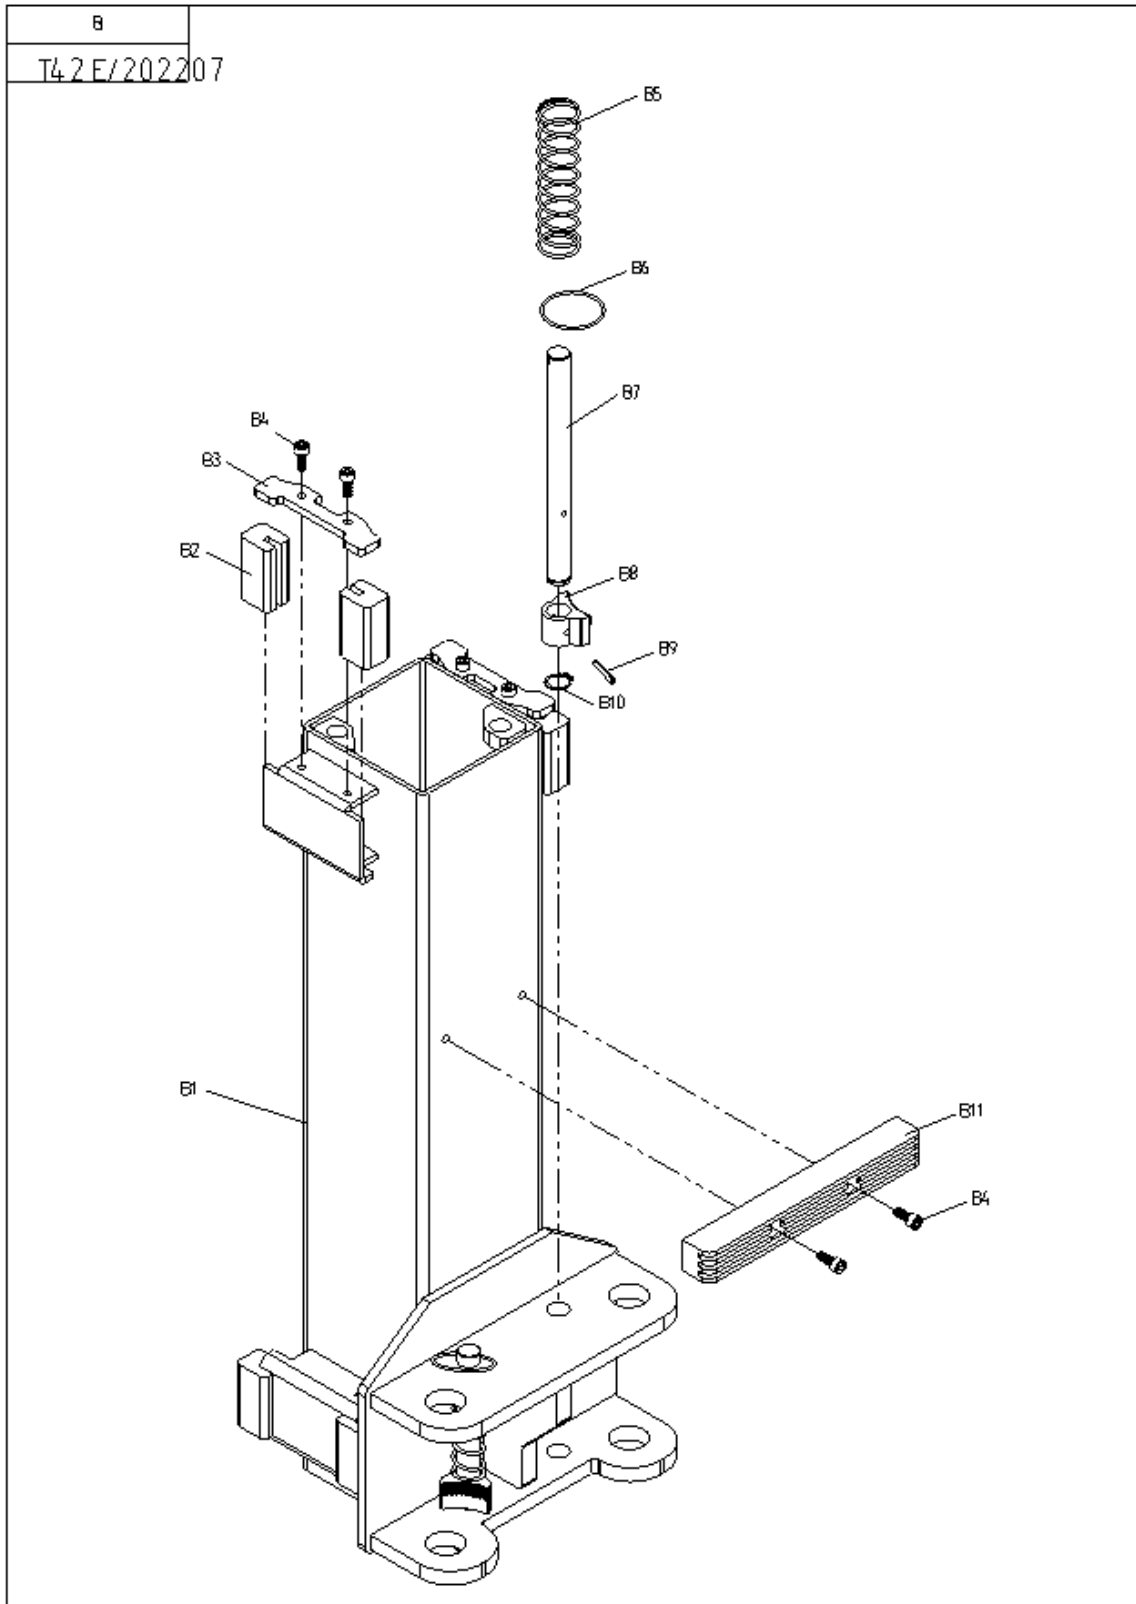


B T42E/202207	B1	JZ08030039954	UT42E-03	carriage assembly
	B2	JZ09030024224	UT40G-00-1	slider
	B3	JZ03035016447	UT40SB-00-11	slider press plate
	B4	FJ04009004703	GB/T70.1 M8×16	hexagon socket head cap screw M8×16
	B5	JZ09029039584	UT42S-00-3	locking shaft spring
	B6	JZ09029040211	UT42S-00-4	key ring
	B7	JZ03029039582	UT42S-00-1	locking shaft
	B8	JZ09030024242	Ø40×δ18	semi-circle block (small)
	B9	FJ06002004977	GB/T879 Ø5×35	spring-type straight pin Ø5×35
	B10	FJ04001003745	GB/T894.1 Ø22	circlip for shaft Ø22
	B11	JZ09030024198	280×35×35	protection rubber mat

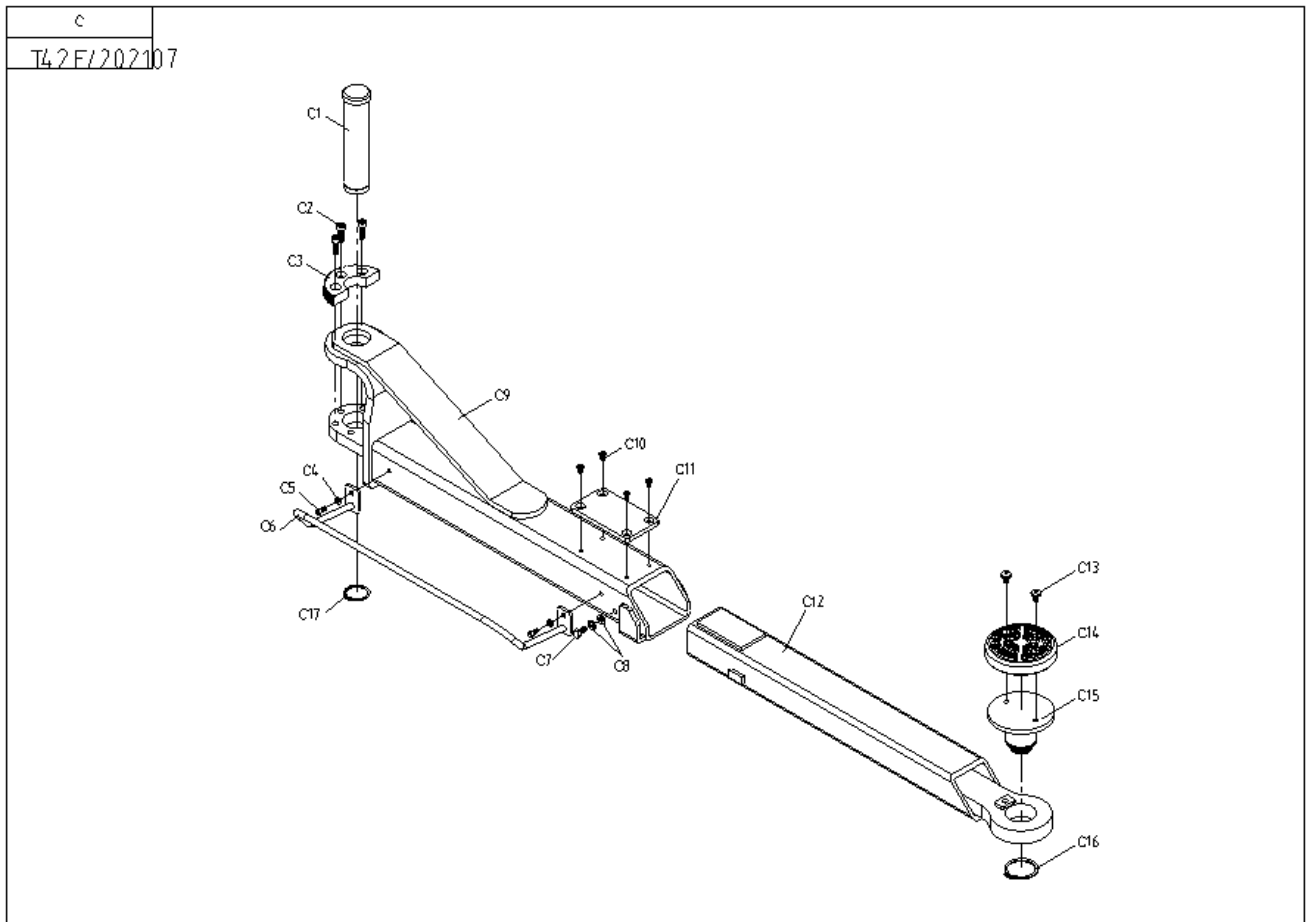


C T42E/202107	C1	JZ03029039227	UT42S-00-2	arm pin
	C2	FJ04009004577	GB/T70.1 M10×20	hexagon socket head cap screw M10×20
	C3	JZ09030024240	Ø40×δ18	semi-circle block (big)
	C4	FJ04002003889	GB/T95 Ø6	plain washer Ø6
	C5	FJ04009004670	GB/T70.1 M6×12	hexagon socket head cap screw M6×12
	C6	JZ08029039262	UT42S-05	lifting arm guardrail assembly
	C7	FJ04009004873	GB/T5781 M8×16	hexagon head bolt full thread M8×16
	C8	FJ04002003902	GB/T95 Ø8	plain washer Ø8
	C9	JZ08029039616	UT42S-04	outside lifting arm assembly
	C10	FJ04006004216	GB/T819.1 M6×10	cross recessed countersunk head screw M6×10
	C11	JZ09030024195	UT40E-00-16	arm rubber mat
	C12	JZ08030022085	UT40E-04	inside lifting arm assembly
	C13	FJ04006004120	GB/T70.2 M8×12	hexagon socket button head screw M8×12
	C14	JZ09030024239	UT40E-00-43	pallet cushion
	C15	JZ09030024238	UT40E-00-53	three pallets assembly
	C16	FJ04001003754	GB/T894.1 Ø50	circlip for shaft Ø50
	C17	FJ04001039229	GB/T894.1 Ø38	circlip for shaft Ø38

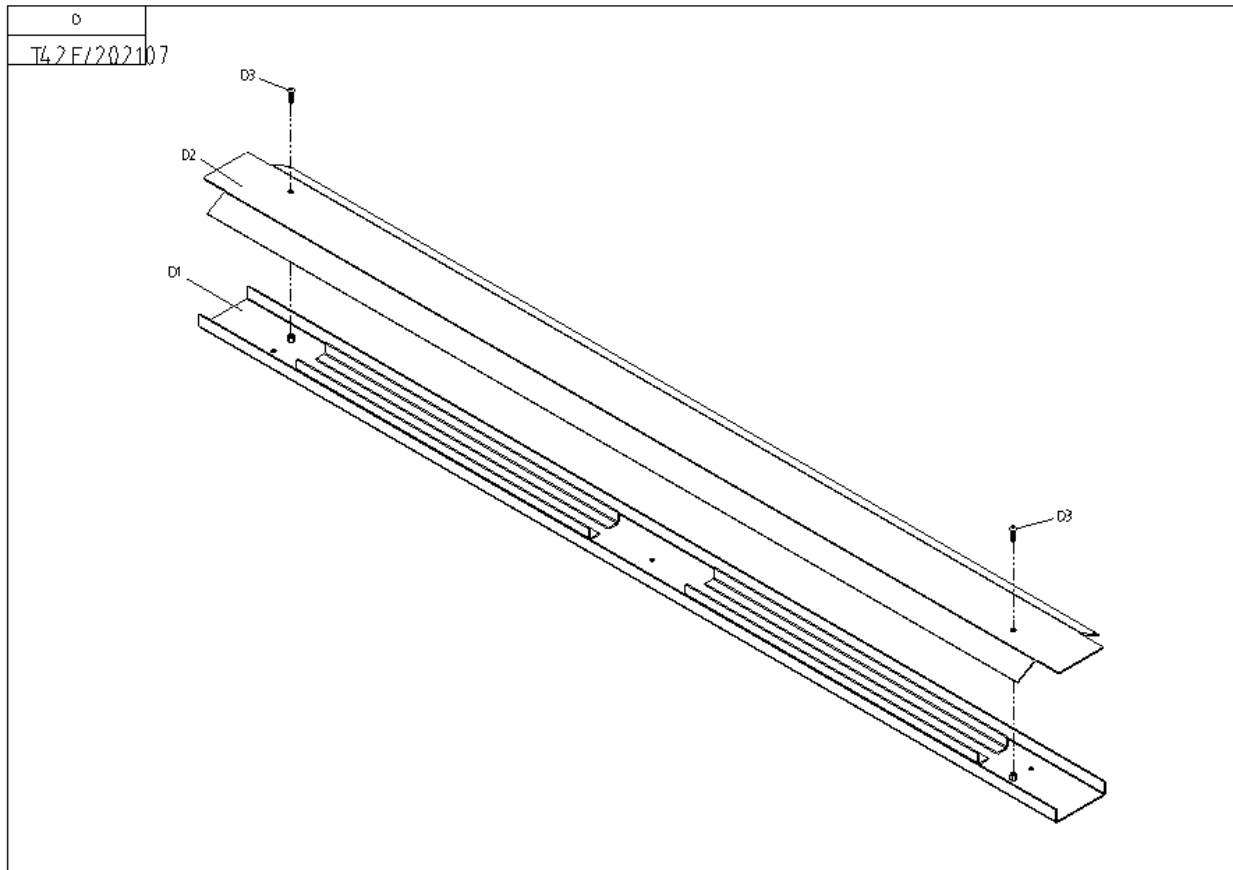



D T42E/202107	D1	JZ08030022087	UT40E-06	oil hose slot board assembly
	D2	JZ08029042346	UT42S-00-6	oil hose cover
	D3	FJ04006004109	GB/T70.2 M10×35	hexagon socket button head screw M10×35

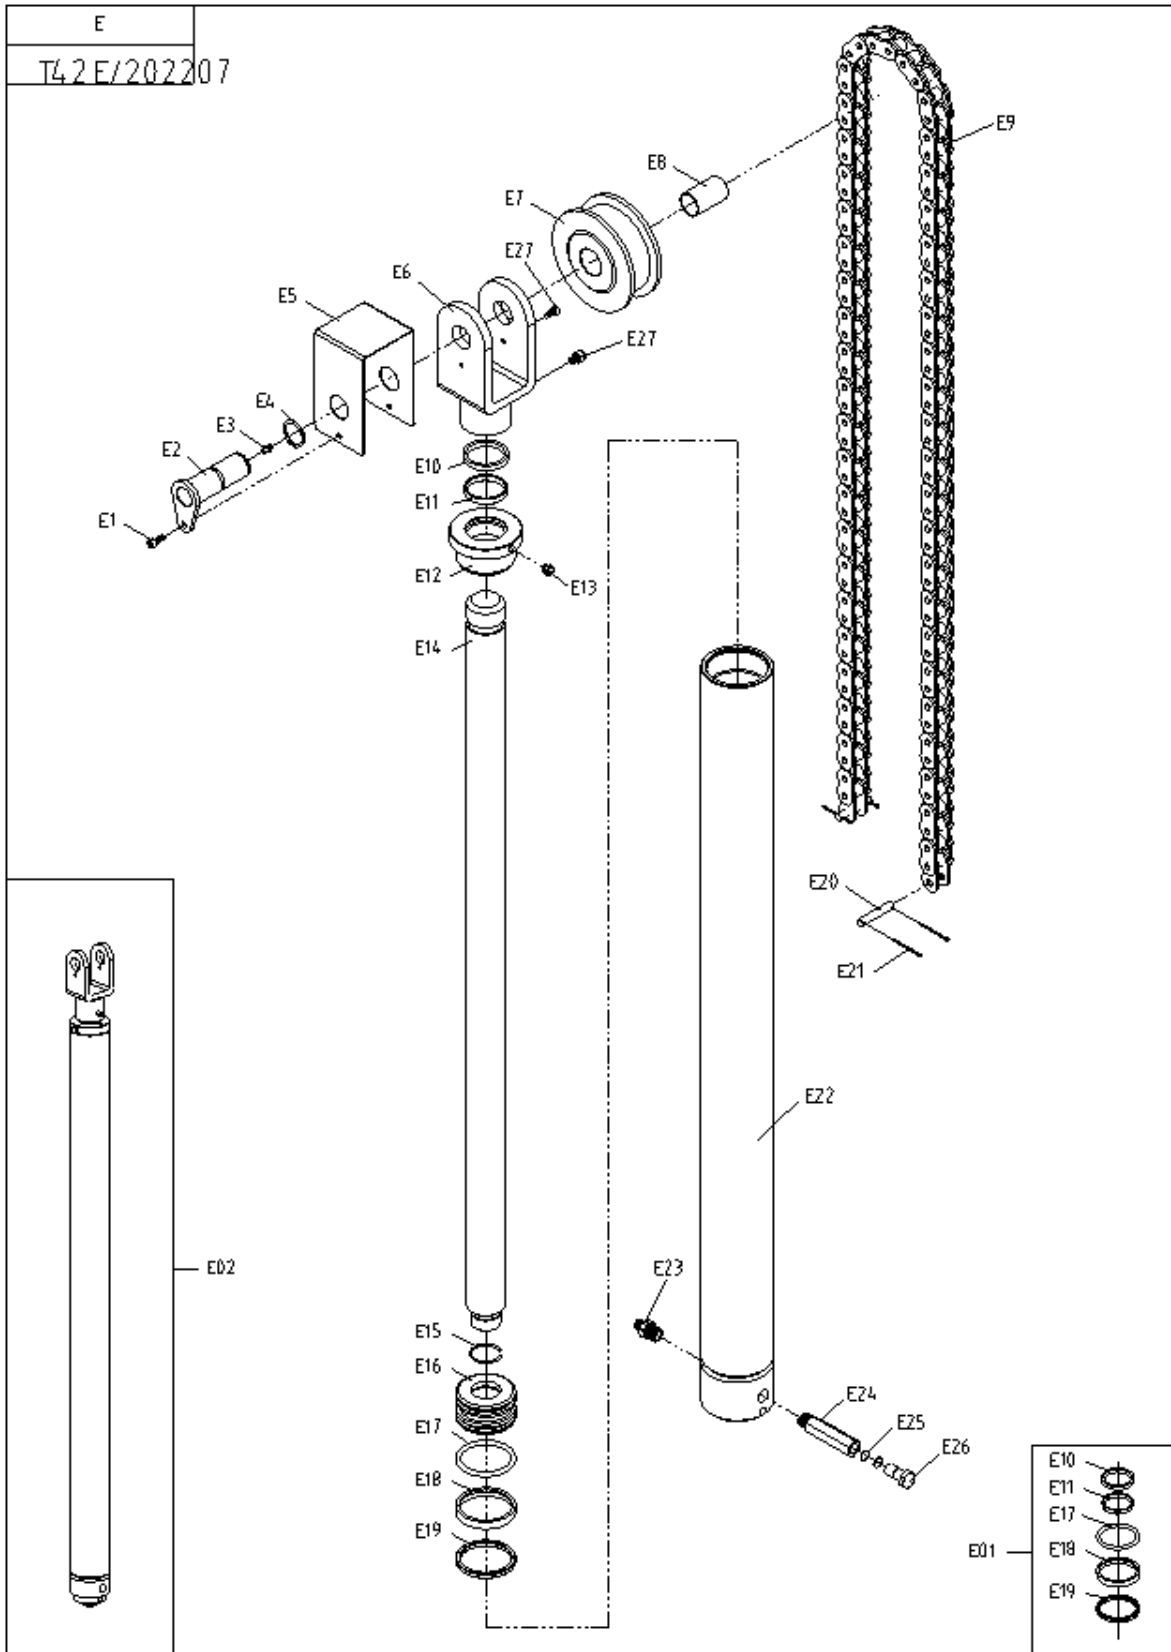


E T42E/20220 7	E1	FJ04009004676	GB/T70.1 M6×16	hexagon socket head cap screw M6×16
	E2	JZ03030016432	UT40E-24	chain roller shaft assembly
	E3	EQ1400200347 5	JB/T7940.1 M6	grease nipple M6
	E4	FJ04001003747	GB/T894.1 Ø25	circlip for shaft Ø25
	E5	JZ03030016429	UT40E-00-12	chain beffle
	E6	JZ09030024246	UT40E-25.02	chain roller support assembly
	E7	JZ09028024186	UT40G-00-6	chain roller
	E8	FJ02011003679	282545	shaft steel sleeve 282545
	E9	FJ02007042347	LH1234 3×4 L=2305.05mm	plate chain
	E10	/	AD48-38×46	dust-proof ring Ø38×46×6.5
	E11	/	Ø38×6×2	wear ring Ø38×6×2
	E12	JZ09030024220	UT40E-25-3	oil cylinder cover
	E13	/	Ø10×2	muffler
	E14	JZ09030024221	UT40E-25-4	piston rod
	E15	/	GB/T895.1 Ø30	steel cable circlip for hole Ø30
	E16	JZ09030024222	UT40E-25-5	piston
	E17	/	Ø63×5.7	O-ring Ø63×5.7
	E18	/	Ø63×10×2.5	wear ring Ø63×10×2.5
	E19	/	Ø63×53×6	U-ring Ø63×53×6
	E20	JZ09030024211	UT40E-00-8	chain fixing shaft
	E21	FJ06002004984	GB/T91 Ø2.5×40	split pin Ø2.5×40
	E22	/	UT40E-25.01	main oil cylinder assembly
	E23	EQ0800500316 6	G1/4--R3/8	oil hose straight joint inner cone G1/4--R3/8
	E24	EQ0800500313 6	G1/4--R3/8 57mm	safety valve joint inner thread G1/4--R3/8 57mm
	E25	FJ08013005436	JB982 G1/4	combined sealing washer G1/4
	E26	EQ0900300321 8	G1/4	english hinged bolt G1/4
	E27	FJ04009004670	GB/T70.1 M6×12	hexagon socket head cap screw M6×12
	E01	JZ06030020593	Ø63/Ø38	oil cylinder seal kit
	E02	JZ09030024219	UT40E-25	main-oil cylinder

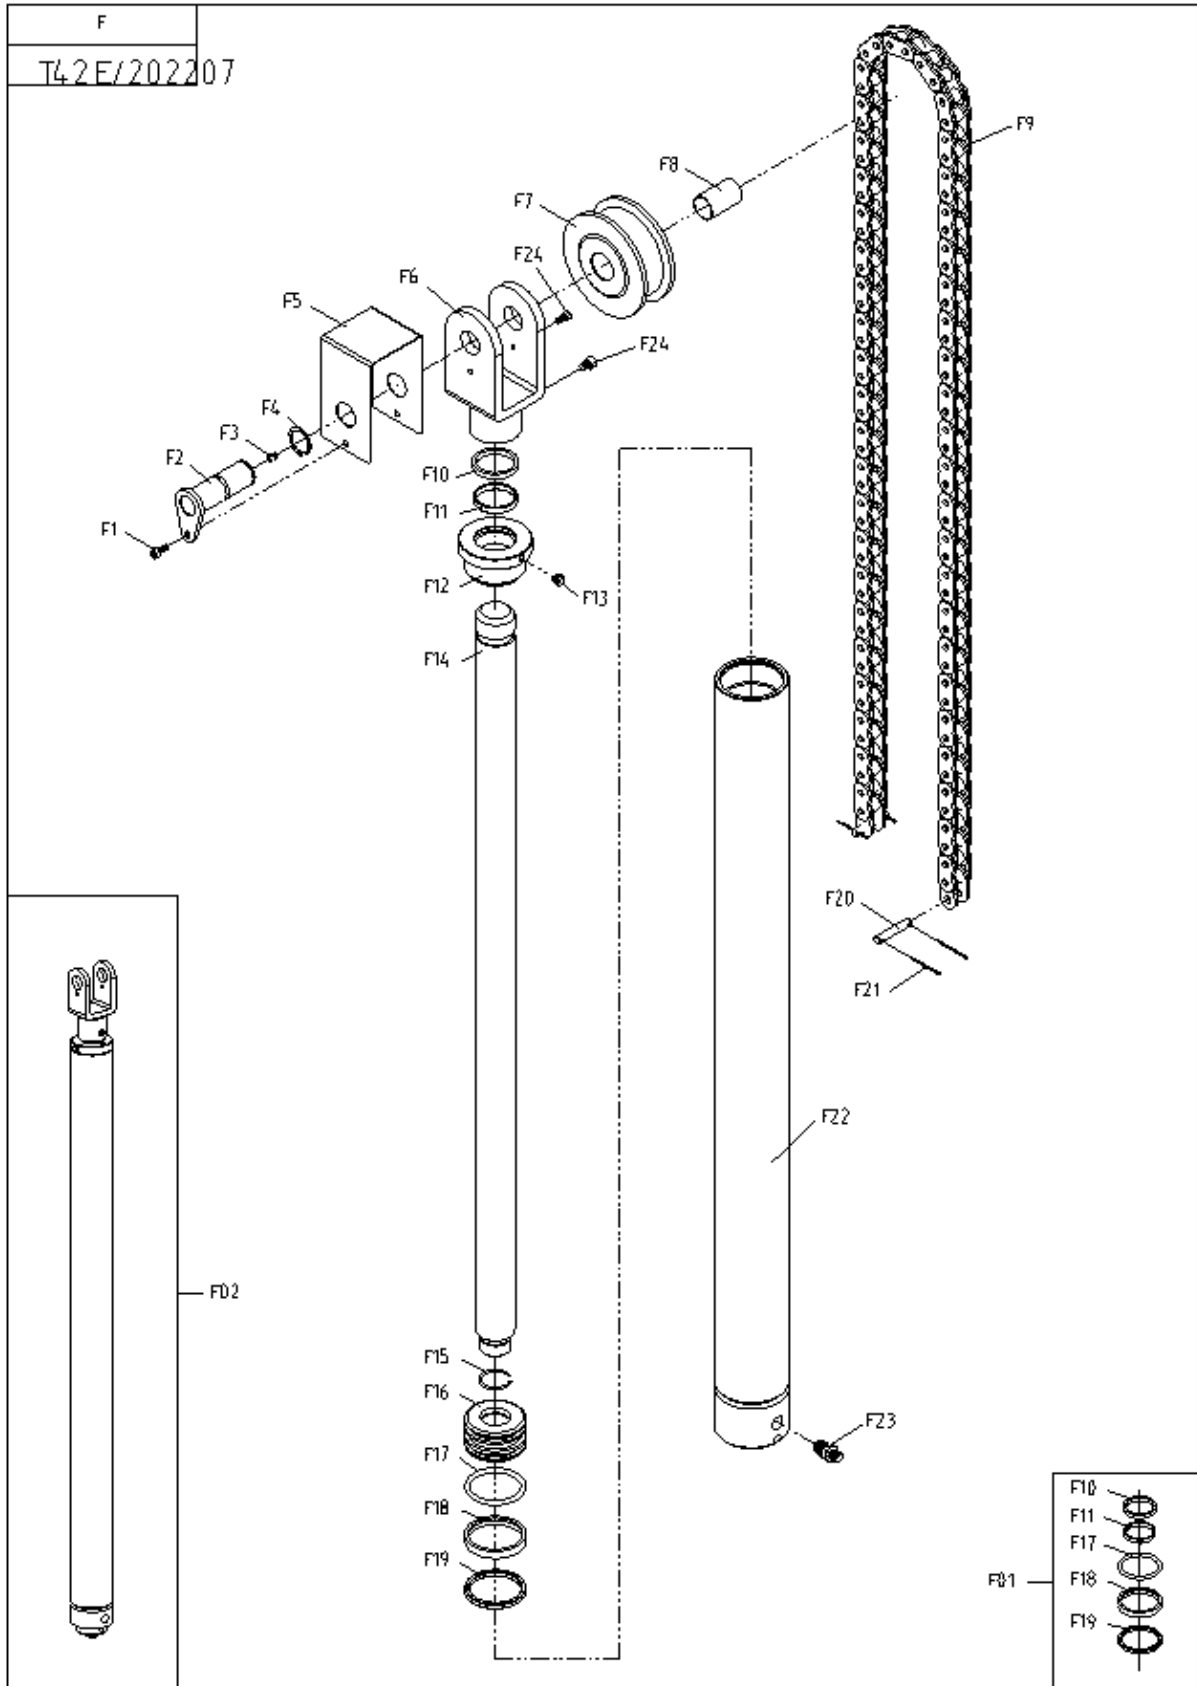


F T42E/20220 7	F1	FJ04009004676	GB/T70.1 M6×16	hexagon socket head cap screw M6×16
	F2	JZ03030016432	UT40E-24	chain roller shaft assembly
	F3	EQ1400200347 5	JB/T7940.1 M6	grease nipple M6
	F4	FJ04001003747	GB/T894.1 Ø25	circclip for shaft Ø25
	F5	JZ03030016429	UT40E-00-12	chain beffle
	F6	JZ09030024246	UT40E-25.02	chain roller support assembly
	F7	JZ09028024186	UT40G-00-6	chain roller
	F8	FJ02011003679	282545	shaft steel sleeve 282545
	F9	FJ02007042347	LH1234 3×4 L=2305.05mm	plate chain
	F10	/	AD48-38×46	dust-proof ring Ø38×46×6.5
	F11	/	Ø38×6×2	wear ring Ø38×6×2
	F12	JZ09030024220	UT40E-25-3	oil cylinder cover
	F13	/	Ø10×2	muffler
	F14	JZ09030024221	UT40E-25-4	piston rod
	F15	/	GB/T895.1 Ø30	steel cable circclip for hole Ø30
	F16	JZ09030024222	UT40E-25-5	piston
	F17	/	Ø63×5.7	O-ring Ø63×5.7
	F18	/	Ø63×10×2.5	wear ring Ø63×10×2.5
	F19	/	Ø63×53×6	U-ring Ø63×53×6
	F20	JZ09030024211	UT40E-00-8	chain fixing shaft
	F21	FJ06002004984	GB/T91 Ø2.5×40	split pin Ø2.5×40
	F22	/	UT40E-26.01	sub oil cylinder assembly
	F23	EQ0800500314 2	G1/4--R3/8	safety valve joint inner thread G1/4--R3/8
	F24	FJ04009004670	GB/T70.1 M6×12	hexagon socket head cap screw M6×12
F01	JZ06030020593	Ø63/Ø38	oil cylinder seal kit	
F02	JZ09030024223	UT40E-26	sub-oil cylinder	
G T42E/20210 7	G1	JZ02036013228	UT40E-08	steel cable assembly
	G2	FJ04002003835	GB/T95 Ø16	plain washer Ø16
	G3	FJ04008004500	GB/T41 M16	hexagon nut M16
H T42E/20210 7	H1	JZ02085015262	300mm	high-pressure oil pipe 300mm
	H2	EQ0800400310 5	2-G1/4	oil hose baffle elbow joint inner cone 2-G1/4
	H3	JZ02085015266	2390mm	high-pressure oil pipe 2390mm
	H4	JZ02085015268	2720mm	high-pressure oil pipe 2720mm

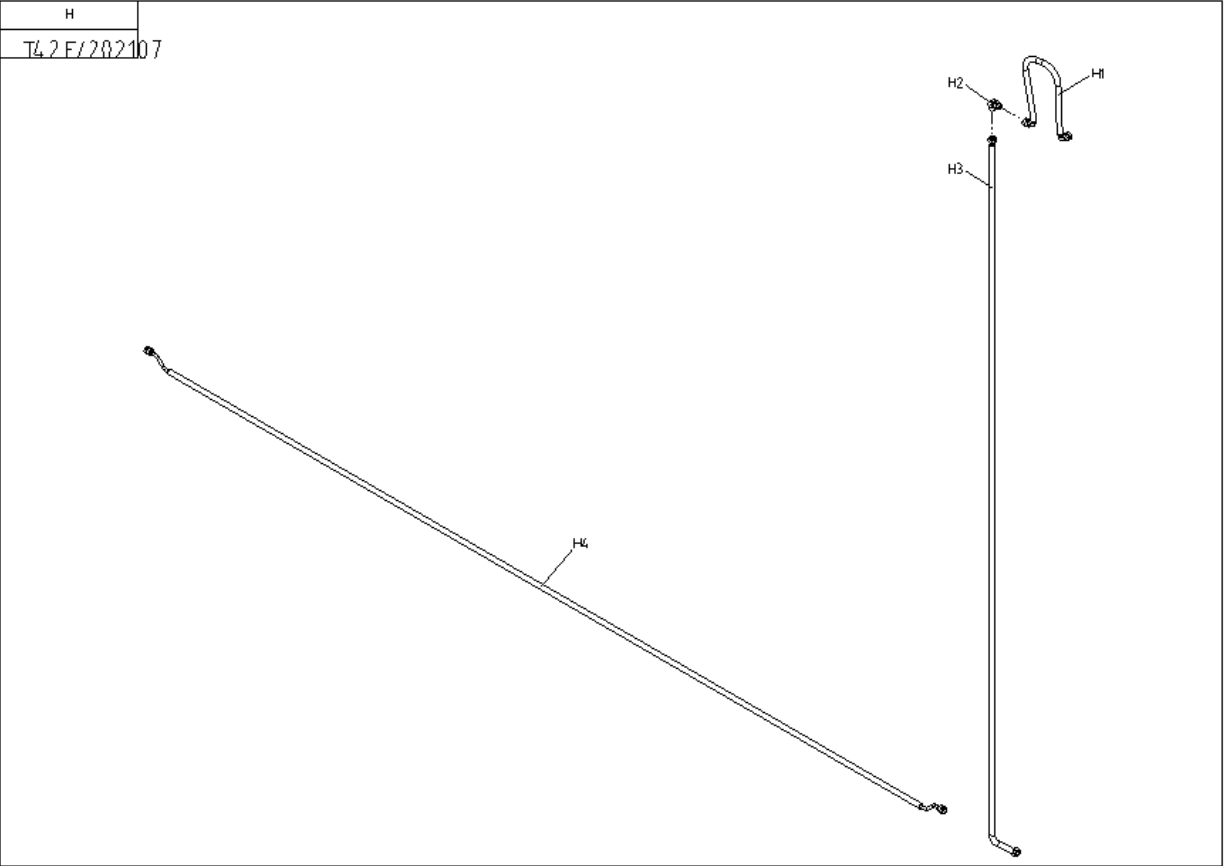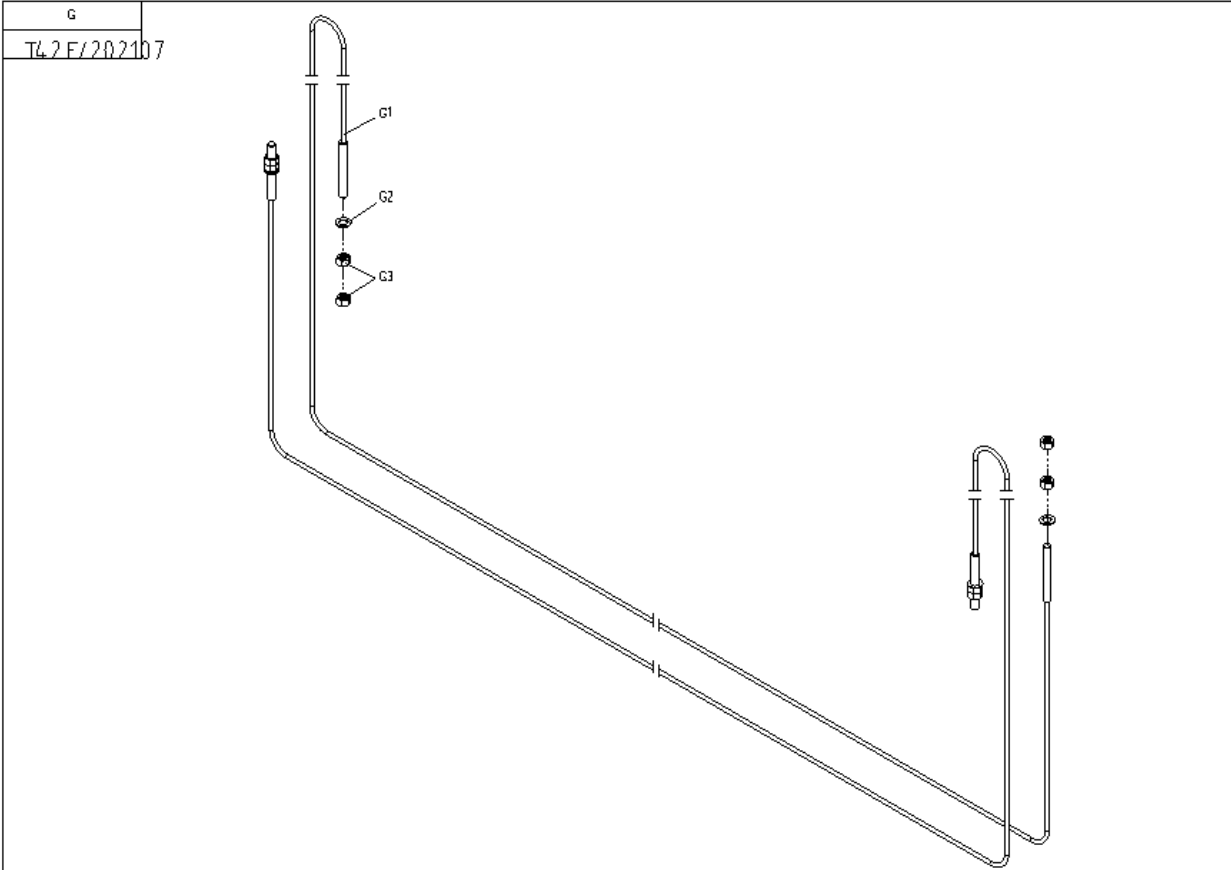

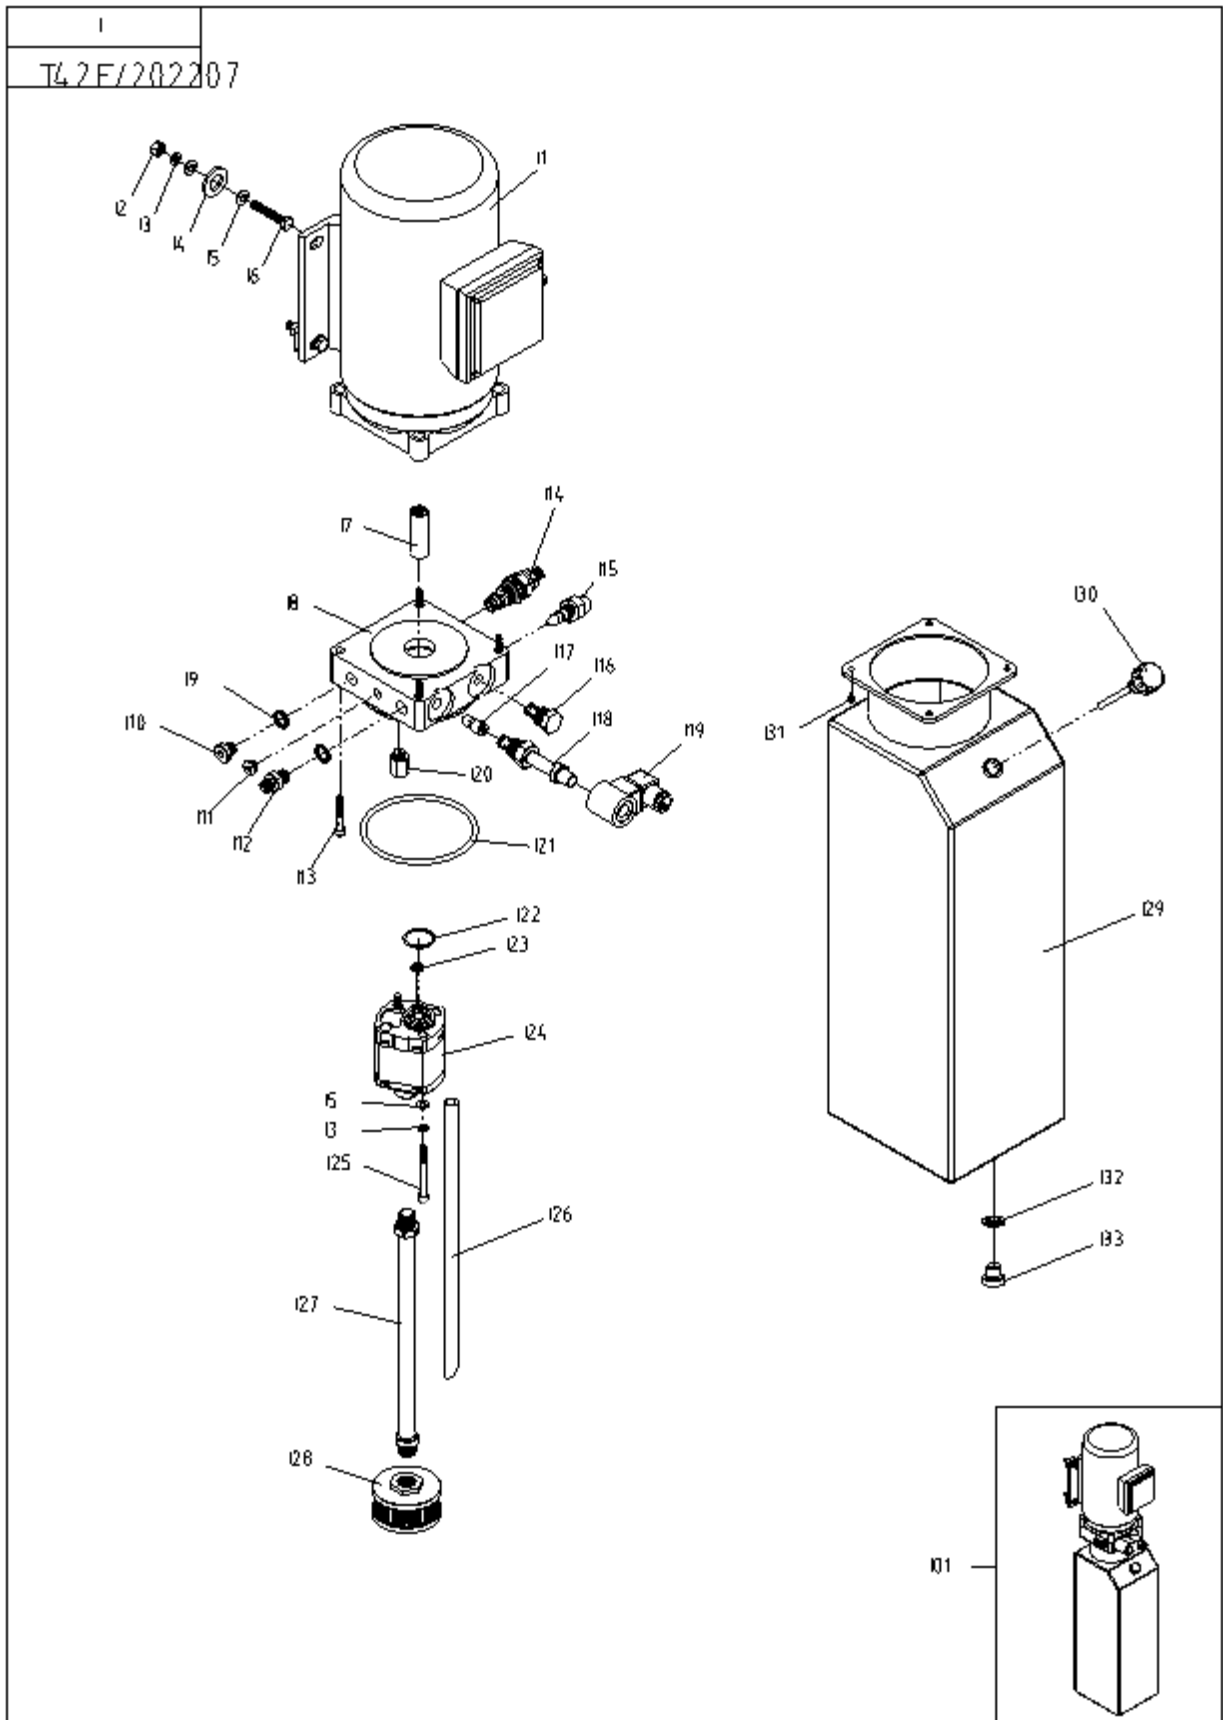

I T42E/2 02207	I1	DD01002001236	3PH/2.2KW/380V/50Hz	3ph motor
	I1 (optional)	DD01002001222	1PH/2.2KW/220V/50Hz	1ph motor
	I2	FJ04008004514	GB/T41 M8	hexagon nut M8
	I3	FJ04002003791	GB/T93 Ø8	spring washer Ø8
	I4	JZ09030024212	UT40E-00-9	motor cushion
	I5	FJ04002003902	GB/T95 Ø8	plain washer Ø8
	I6	FJ04009004882	GB/T5783 M8×35	hexagon head bolt full thread M8×35
	I7	EQ01004002698	YBZ-F2.1D4H1/1-03 L=48mm	coupling
	I8	EQ01004002721	LBZ-G2FK-2	center valve socket
	I9	FJ08013005436	JB982 G14	combined sealing washer G14
	I10	FJ04004003975	G1/4	plug G1/4
	I11	FJ04004044984	5/16-24 UNF	internal hexagon flange face plug
	I12	EQ08005003160	G1/4--G1/4	oil pipe straight union inner cone G1/4--end face G1/4
	I13	/	GB/T70.1 M6×40	hexagon socket head cap screw M6×40
	I14	EQ01004047324	RV-M20-42-A	overflow valve
	I15	FJ04004003981	G3/8	plug G3/8
	I16	EQ01004002737	DF08-01-00	one-way valve
	I17	EQ01004002733	BL-I2.5	balance valve
	I18	EQ01004002694	LSV2-08-2NCP-M-2H	normally closed solenoid valve element
	I19	EQ01004002693	24VDC	normally closed solenoid valve coil
	I20	EQ01004002702	1.HCF-Z1/4 2.YBZ-E2D3I1/1-05A	cushion valve
	I21	/	Ø109×5.3	O-ring Ø109×5.3
	I22	FJ08001037060	Ø32×2.4	O-ring Ø32×2.4
	I23	/	Ø9.5×1.7	rectangle seal ring Ø9.5×1.7
	I24	EQ01002002680	CBKA-F2.7F	gear pump
	I24 (optional)	EQ01002002679	CBKA-F2.1F	gear pump
	I25	FJ04009004720	GB/T70.1 M8×80	hexagon socket head cap screw M8×80
	I26	EQ01004040266	YBZ-E2D1/1-01 L=340mm	return tube
	I27	EQ01004002715	YBZ-F2.1D4H1/1-02 L=294mm	suction tube
	I28	EQ01004002705	YBZ-E2D3I1/1-10 Ø70	filter
I29	EQ01004002710	YBZ-SLYX-8L-L-C	oil tank	
I30	EQ01004002742	M30×2	oil tank cap	

I31	FJ04009004954	GB/T5789 M5×18	hexagon flange bolt M5×18
I32	/	JB982 G3/8	combined sealing washer G3/8
I33	/	G3/8	inner hexagon plug G3/8
I01	EQ01001002539	3PH/2.2KW/380V/50Hz /8L/ 2.7cc	power unit assembly
I01 (optional)	EQ01001002533	1PH/2.2KW/220V/50Hz /8L/ 2.1cc	power unit assembly

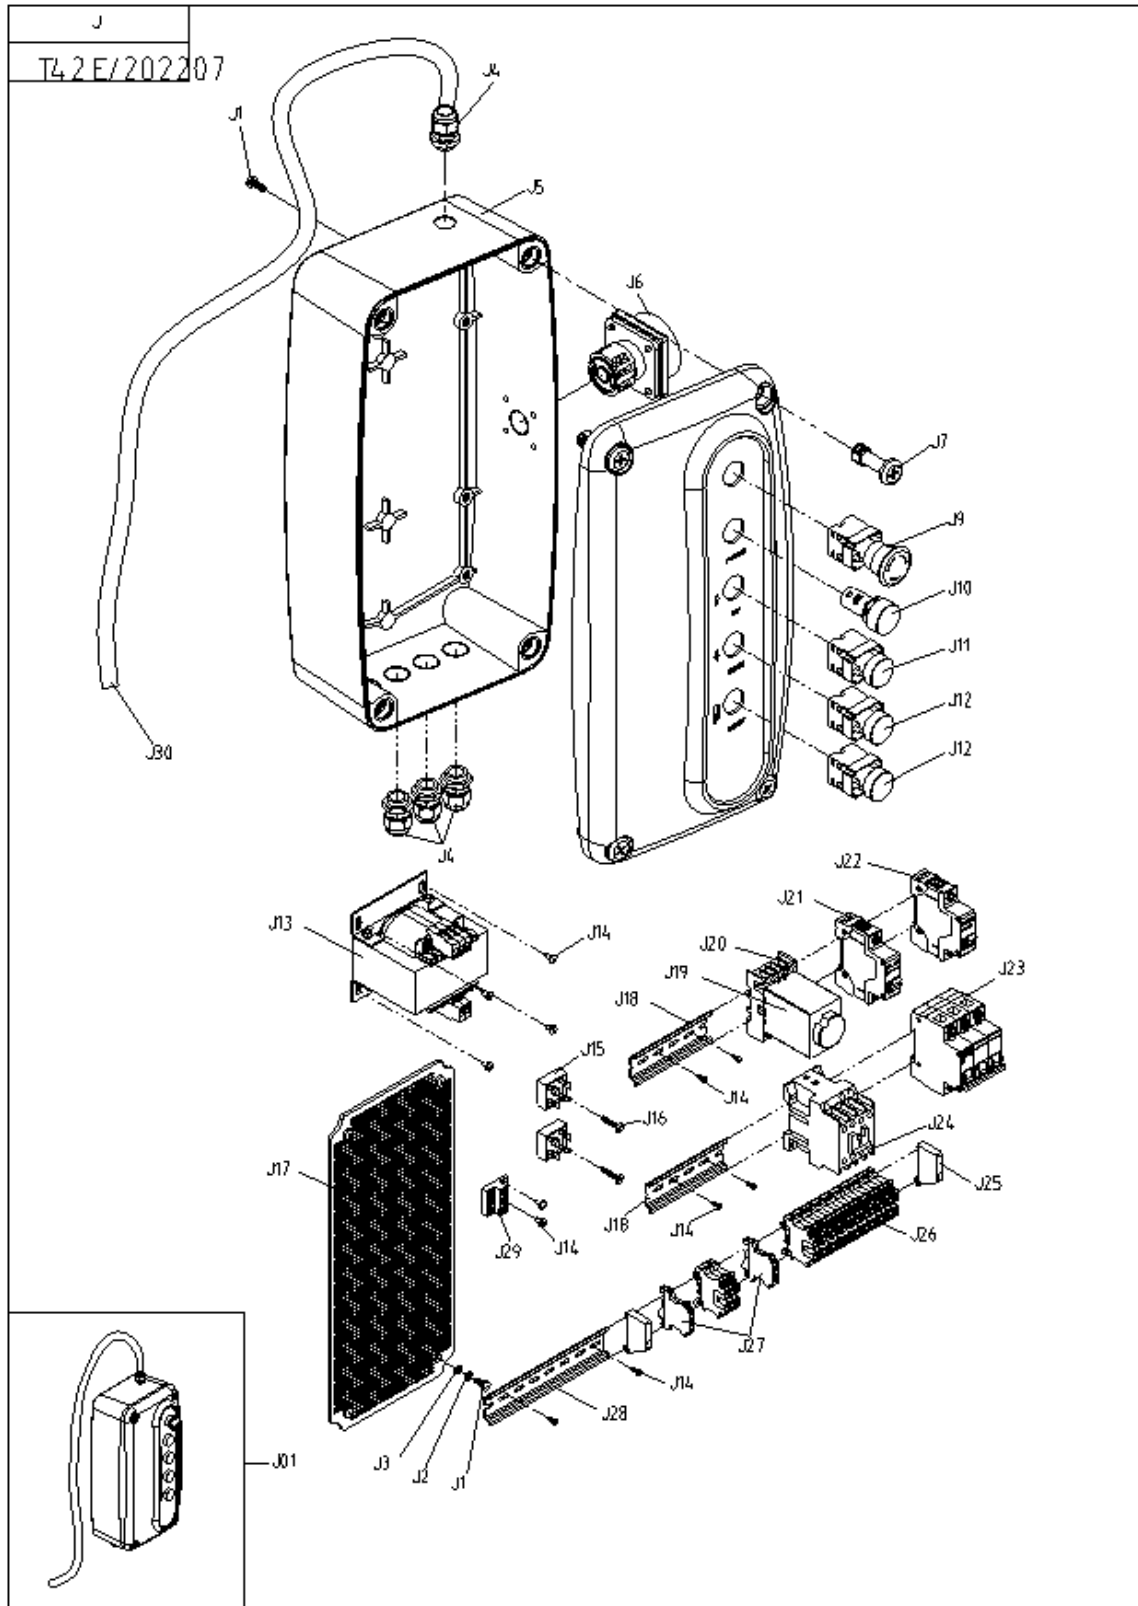

J T42E/2022 07	J1	FJ04006004337	GB/T818 M5×12	cross recessed pan head screw M5×12
	J2	FJ04002003787	GB/T93 Ø5	spring washer Ø5
	J3	FJ04002003880	GB/T95 Ø5	plain washer Ø5
	J4	DD02001001294	PG13.5	cable screw joint
	J5	/	420×220×100	control box body
	J6	JZ09030045871	420×220×50	control box cover
	J7	DD03009001612	LW26GS-20/04	power switch
	J8	JZ09030045876	M16×42	locking screw
	J9	DD03009001598	LAY5-BE102	emergency stop switch
	J10	DD03004001476	LD11-22D/21	signal
	J11	DD03009001565	LA139A-EA15--1NO1NC	button switch 1NO1NC
	J12	DD03009001563	LA139A-EA13--2NO	button switch 2NO
	J13	DD04004001823	BK160VA 220V/380V/24V	transformer
	J14	FJ04006004382	GB/T845 ST4×10	cross recessed pan head tapping screw ST4×10
	J15	DD04026002386	KBPC25	rectifier bridge
	J16	FJ04006004236	GB/T846 ST4×25	cross recessed countersunk head tapping screw ST4×25
	J17	JZ09030045873	360×160×4	grid plate
	J18	DD02011001431	DG-01 L=100	lead rail
	J19	DD04015002139	JSZ3A-A	time relay
	J20	DD04015002150	CZF08A	relay socket
	J21	DD03007001523	DZ47-63/C2 1P	circuit breaker
	J22	DD03007001518	DZ47-63/C10 1P	circuit breaker
	J23	DD03007001521	DZ47-63/C16 3P for 3phase	circuit breaker 3phase
	J23 (optional)	DD03007001524	DZ47-63/C25 2P for 1phase	circuit breaker 1phase
	J24	DD03008001545	CJX2s 1210	AC contactor
	J25	DD03010001677	JXBs-BF	fixed terminal
	J26	DD03010001679	UK2.5B	phoenix terminal
	J27	DD03010001659	USLKG2.5	earth terminal
	J28	DD02011001431	DG-01 L=155	lead rail
	J29	DD03010001691	JDG-A-2	grounding strip
	J30	DD05001002403	3×1.5+1	three-phase power wire
	J30 (optional)	DD05001002400	2×2.5+1	single phase power wire
	J01	/	190×380×130	control box complete 3phase
J01 (optional)	/	190×380×130	control box complete 1phase	